

Seat the lens into the frame at the nose piece, then seat the outer edges. Finish by seating the top of the lens fully into the goggle frame.



## REMOVING GOGGLE LENS

Separate the frame from the top of the lens. Grab exposed lens and pull the lens from the goggle frame.



## GOGGLE GASKET



The included removable / replaceable comfort gasket is secured by four hooks, 3 of which are indicated in the graphic above. Utilization of the gasket is especially recommended for individuals requiring corrective [Rx] lenses.

Make sure the Rx Insert is securely locked in position



Important: Tip of the post closer to face [not lens]

Squeeze the post into

the two pins until they

are secured


RX INSERT AND POST SOLD SEPARATELY

Mount Rx Insert on post





## **REMOVE / ATTACH GOGGLE STRAP**

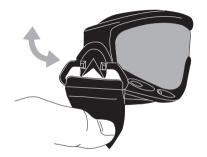

MAINTENANCE: Wiley X lenses are specially coated to offer superior abrasion resistance. Please follow instructions to prolong the life of your lenses and keep them performing at their best:

Clean lenses with water only.

Do not use solvents or special cleaners.

- Use micro-fiber cleaning cloth provided to gently wipe clean.
- Never use paper products to clean and avoid wiping lens surface when dry and/or dirty as this may potentially scratch the lens.

WARNINE: Wiley X brand eyewear is tested tough. However, impact resistant eyewear is not unbreakable and does not provide unlimited eye protection under all circumstances and conditions. Misused, abused, scratched and/or damaged eyewear can reduce impact protection [and void your limited warranty]. Dirty and/or property damage]. Keep your Wiley X eyewear clean with water only. Do not use solvents or abrasives as it could scratch or damage the product reducing its effectiveness. Store your Wiley X eyewear in the protective case provided to prolong the life of the lenses. Most of all, take all appropriate precautions when wearing your Wiley X eyewear during hazardous and/or dangerous activities and conditions. Wiley X, Inc. is not responsible for personal injury, property damage or losses incurred while using Wiley X brand products.

Remove or attach the goggle strap by positioning the strap perpendicular to the frame as pictured above.