


82V DEDICATED AXIAL BLOWER

GB 600 (2402702)

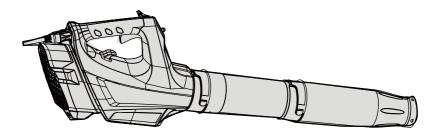



Owner's Manual TOLL-FREE HELPLINE: 1-855-470-4267 www.greenworkstools.com/82v-Commercial/

Read all safety rules and instructions carefully before operating this tool.



CONTENTS

Contents	2
Product specifications	2
Important safety instructions	3
Symbols	6
Know your blower	8
Assembly	9
Operation	15
Battery & charger maintenance	18
Environmentally safe battery disposal	21
Troubleshooting	22
Limited warranty	24
Exploded View	26
Parts List	27

PRODUCT SPECIFICATIONS

82V BACKPACK AXIAL BLOWER

Туре	Cordless, battery-operated
Motor	
Air volume	
Air speed	
Battery Charging time	4.5 Hours
Noise Rating(ANSI)	60dB(A)
Weight	4.6 lbs. (2.1 kg)



A WARNING

Disconnect before cleaning or changing accessories.

A W A R N I N G

Do not use on wet materials.

AWARNING

Read and understand all instructions before using this product. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury. When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

BEFORE USING (THIS POWER TOOL)

- Do not leave appliance plugged in. Unplug from outlet when not in use and before servicing.
- Do not allow to be use as a toy. Close attention is necessary when used by or near children.
- · Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged plug or cord. If the tool is not working as it should, or if it has been dropped, damaged, left outdoors, or dropped into water, return it to an authorized service center.
- Do not pull or carry by the cord, use the cord as a handle, shut a door on the cord, or pull the cord around sharp edges or corners. Do not run appliances over the cord. Keep the cord away from heated surfaces.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle the plug or any other appliances with wet hands.
- Do not put any object into openings. Do not use if any openings are blocked. Keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all body parts away from openings and moving parts.
- Turn off all controls before unplugging.
- · Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

WHEN USING (THIS POWER TOOL)

- Do not operate power tools in an explosive atmosphere, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks that may ignite the dust or fumes.
- Avoid body contact with grounded surfaces such as pipes, radiators, ranges, and refrigerators. There is an increased risk of electric shock if your body is grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock (Store indoors).
- · Do not handle or plug-in tools with wet hands.
- Never allow children to operate the equipment. Never allow adults to operate the equipment without proper instruction.
- Wear eye protection that is marked to comply with ANSI Z87.1 when operating this product.
- · Wear hearing protection.

IMPORTANT SAFETY INSTRUCTIONS

- Wear heavy long pants, boots, and gloves. Avoid loose garments or jewellery that could get caught in moving parts of the machine or its motor.
- Do not force the tool. Use the correct tool for your application. The correct tool will work more efficiently and safely when it is used at the rate that it was designed to work at.
- Do not operate the equipment while barefoot or when wearing sandals or similar lightweight footwear. Wear protective footwear that will protect your feet and improve your footing on slippery surfaces.
- Secure long hair so it is above shoulder level to prevent entanglement in any moving parts.
- Keep firm footing and balance. Do not overreach. Overreaching can result in loss of balance.
- · Do not allow children or untrained individuals to use this unit.
- Avoid accidental start-ups. Be sure the power switch is not on before plugging in. Turn off power switch before unplugging.
- Do not use the tool if the switch does not turn it on or off. Any tool that cannot be controlled with the switch is dangerous, and must be repaired.
- Do not leave the tool unattended when plugged in. Unplug from the power outlet when not in use, before servicing, and before storing the tool. Such preventative safety measures reduce the risk of starting the tool accidentally.
- Keep all bystanders, children, and pets at least 50' (15 m) away.
- · For household use only.
- · For use only with (GAW 100, GL 900) battery pack.
- · For use only with GC 400 charger.
- Do not operate this unit when you are tired, ill, or under the influence of alcohol, drugs, or medication.
- · Do not operate in poor lighting.
- Keep all parts of your body away from any moving parts and all hot surfaces of the unit.
- Check the work area before each use. Remove all objects that can be thrown or become entangled in the machine, such as rocks, broken glass, nails, wire, or string.
- Use only identical manufacturer's replacement parts and accessories. Use of any other parts may create a hazard or cause product damage.

FOR BATTERY-OPERATED POWER TOOLS:

- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the power tool with your finger on the switch or energizing power tool that have the switch on invites accidents.
- Disconnect the battery pack from the power tool before making any adjustments, changing
 accessories, or storing the power tool. Such preventive safety measures reduce the risk of
 starting the power tool accidentally.

Exception: This instruction is not applicable for batteries that cannot be disconnected from the

power tool in normal use.

IMPORTANT SAFETY INSTRUCTIONS

- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help. Liquid ejected from the battery may cause irritation or burns. (This advice is considered correct for conventional NiMh, NiCd, lead acid and lithium-ion cell types. If this advice is incorrect for a cell design that differs from these, then the correct advice may be substituted.)
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion. The temperature of 130°C can be replaced by the temperature of 265°F.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

WARNING (PROPOSITION 65)

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- · Lead from lead-based paints
- · Crystalline silica from bricks and cement and other masonry products, and
- · Arsenic and chromium from chemically treated lumber.

Your risk of exposure to these chemicals varies depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area, and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles.

CHILD SAFETY

Tragic accidents can occur if the operator is not aware of the presence of children.

- Keep children out of the working area and under the watchful care of a responsible adult.
- Do not allow children under the age of 14 to operate this blower. Children who are 14 years of age and older must read and understand the operating instructions and safety rules in this manual and must be trained and supervised by a parent.
- Stay alert, and turn the blower off if a child or any other person enters the working area.
- Use extreme care when approaching blind corners, doorways, shrubs, trees, or other objects that may obscure your view of a child who may run into the path of the blower.

SAVE THESE INSTRUCTIONS

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watts	Power
min	Minutes	Time
	Alternating Current	Type of current
	Direct Current	Type or a characteristic of current
/min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute
	Wet Conditions Alert	Do not expose to rain or use in damp locations
	Read The Operator's Manual	To reduce the risk of injury user must read and understand operator's manual before using this product.
	Eye and Hearing Protection	Wear eye and hearing protection that is marked to comply withANSI Z87.1 when operating this equipment.
	Safety Alert	Precautions that involve your safety.
	Long Hair	Failure to keep long hair away from the air inlet could result in personal injury.
	Loose Clothing	Failure to keep loose clothing from being drawn into air intake could result in personal injury.
	Keep Bystanders Away	Keep all bystanders at least 50 ft. away.
	Blower Tubes	Do not operate without tubes in place.
	Ricochet	Thrown objects can ricochet and result in personal damage.
	Impeller Blades	Rotating impeller blades can cause severe injury.
	Class II Construction	Double-insulated construction

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury
	CAUTION	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.


SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician. For service we suggest you return the product to your nearest AUTHORIZED **SERVICE CENTER** for repair. When servicing, use only identical replacement parts.

A WARNING


To avoid serious personal injury, do not attempt to use this product until you have read this Owner's Manual thoroughly and understand it completely. If you do not understand the warnings and instructions in this Owner's Manual, do not use this product. Call the Toll-free Helpline (1-855-470-4 267) for assistance.

🛦 W A R N I N G

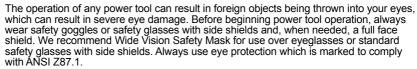

SAVE THESE INSTRUCTIONS

KNOW YOUR BLOWER

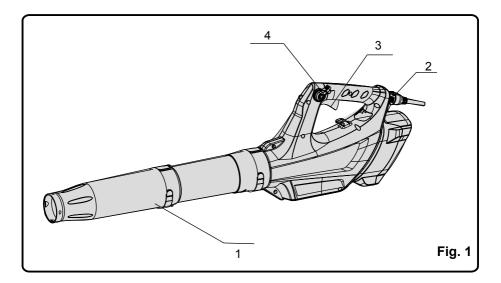

KNOW YOUR BLOWER (See Figure 1.)

The safe use of this product requires an understanding of the information on the product and in this operator's manual as well as a knowledge of the project you are attempting. Before use of this product, familiarize yourself with all operating features and safety rules.

1. BLOWER TUBE

The blower tube can be easily installed on the blower without any additional tools.

2. POWER CORD

Insert the power cord in the socket on the back of the blower.

3. TRIGGER

Starts/Stops the flow of air through the blower.

4. CRUISE CONTROL LEVER

Pull backwards on the Cruise Control Lever to engage and lock the trigger. Push forward on the Cruise Control Lever to release and disengage the trigger.

UNPACKING

This product requires assembly.

• Carefully remove the product and any accessories from the box. Make sure that all items listed in the packing list are included.

• Inspect the tool carefully to make sure no breakage or damage occurred during shipping.

• Do not discard the packing material until you have carefully inspected and satisfactorily operated the tool.

• If any parts are damaged or missing, please call 1-855-470-4267.

🛦 W A R N I N G

Do not use this product if any parts on the packing list are already assembled to your product when you unpack it. Parts on this list are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.

PACKING LIST		
Part Name	Figure	Qty
82V Blower		1
Blower Tube		2
Angled Blower Tube		1
Shoulder Strap		1
Operator's Manual		1

A WARNING

To avoid serious personal injury, the blower tube must be used when operating this unit. NOTE: The blower tube is not assembled on this unit. Installation is required to provide safe and easy use for the operator.

🛦 W A R N I N G

If any parts are damaged or missing do not operate this product until the parts are replaced. Failure to heed this warning could result in serious personal injury.

🛦 W A R N I N G

Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse, and could result in a hazardous condition, leading to possible serious personal injury.

A WARNING


Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

AWARNING

To prevent serious personal injury, make sure the unit is in the OFF position, it is unplugged, and the impellers have stopped before attaching or removing tubes.


ASSEMBLY

- 1. Slide the blower tube onto the blower.(See Fig.2)
- 2. Twist the blower tube clockwise until the tube locks into position.

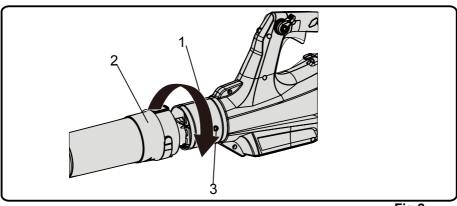



3. Install tube 1 onto tube 2 and twist clockwise until the tube locks into position.(See Fig.3)

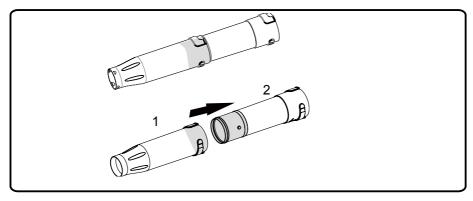



A W A R N I N G

Never operate the blower with the nozzle not fully assembled and locked.

CONNECTING THE POWER CORD TO THE BLOWER (See Figure 4.)


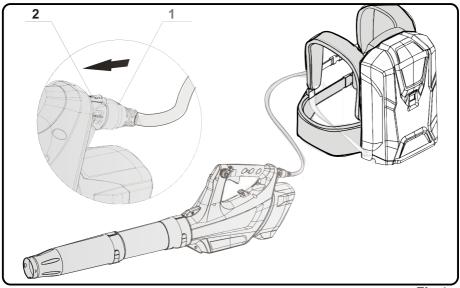


Fig.4

1. Insert the power cord (1) in the socket (2) on the back of the blower.

2. Push the plug into the socket and turn counter-clockwise until the plug's latch is engaged and secure.

CONNECTING THE BLOWER TO THE BACKPACK BATTERY.

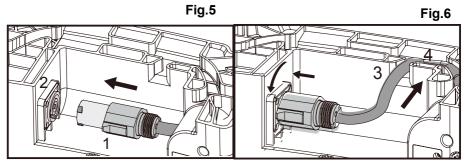

1. Insert the plug (1) in the socket (2) - line up the lugs on the plug with the slots in the socket.


2. Once the end of the plug is inserted in to the socket, turn the plug clockwise until the latch is engaged and secure.

3. Fit cable in the cable (3) duct and wind through the (4) housing – see also "Positioning the Cable".

POSITIONING THE CABLE

The cable can be fitted in different cable ducts. If the power tool is being used with the battery, follow the instructions below:

Fig.7

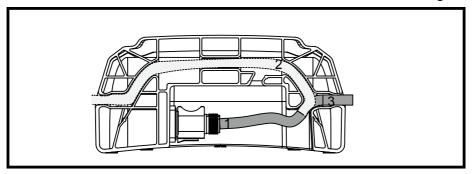


1. If using next to or behind your body, fit the cable (1) in the lateral cable ducts (2) or (3) depending on the tool that you are using and secure into place.

NOTE: Always use the cable outlet at the side in which the power tool is being held and controlled.

🛦 W A R N I N G

To reduce the risk of accidents, never lay the cable diagonally - it may snag on objects.

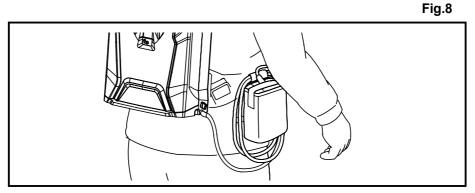

If the cable is too long, attach it to the retainer on the bag.

FITTING THE HARNESS

Adjusting the Harness Straps

A



A Pull the ends of the straps downward to tighten the harness.










B Lift the tabs of the adjusters to loosen the straps.

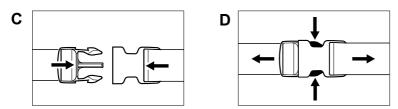

 $\boldsymbol{\mathsf{C}}$ Close and lock the quick-release fastener by pushing it together.

D Squeeze the hooks to open the quick-release fastener.

Put on the shoulder strap.



- 1. Fasten and adjust the waist belt (1) so that it rests comfortably on your hips thread the end of the belt through the loop (2) do not let the strap hang down.
- 2. Adjust the harness straps (3) to the correct length.
- 3. Adjust chest strap (4) to correct length and fasten it together.

The back padding must fit firmly and securely against your back.

Removing Harness

- · Open the quick-release fasteners on the waist belt and chest strap.
- Loosen the harness straps by lifting the sliding adjusters and then take off the battery.

Throwing Off the Machine

WARNING

The battery must be quickly thrown off in the event of imminent danger. The waist belt and chest strap must be opened before throwing the battery to the ground.

Pouch

Accommodates adapter during work breaks and after finishing work.

🛦 W A R N I N G

Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

A W A R N I N G

Always wear eye protection with side shields marked to comply with ANSI Z87.1, along with hearing protection. Failure to do so could result in objects being thrown into your eyes and other possible serious injuries.

🛦 W A R N I N G

Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury. Before each use, inspect the entire product for damaged, missing, or loose parts, such as screws, nuts, bolts, caps, etc. Tighten securely all fasteners and caps and do not operate this product until all missing or damaged parts are replaced.

HOLDING THE TOOL

Operator is wearing proper clothing, such as boots, safety glasses or goggles, ear/hearing protection, gloves, long pants and a long-sleeved shirt.

The blower is designed to be operated with one hand.

The user can carry it holding the control handle with the left or right hand.

Always walk slowly while working.

Always check the blowing nozzle outlet area.



STARTING/STOPPING THE BLOWER

Before start-up, make sure that the blower is in perfect condition to guarantee safe operation.


- Squeeze the switch trigger to start.
- To change speed, Press or release trigger by degrees to increase or decrease the speed.

USING CRUISE CONTROL LEVER

This blower is equipped with a cruise control function. Please read and understand the function of the Cruise control lever.

- · Squeeze the trigger to start the unit.
- Once the unit is on, pull back the lever clockwise to increase the speed. This will lock the speed at the desired setting.
- To decrease the speed, push the lever counter clockwise to decrease the speed to the desired setting.

NOTE: If you decrease the speed all the way, the unit will shut off and step one will need to be repeated.

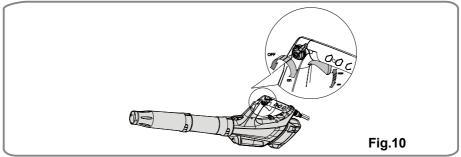

🛕 W A R N I N G

- To avoid serious personal injury, wear goggles or safety glasses at all times when operating this unit. Wear a face mask or dust mask in dusty locations.
- To prevent serious personal injury or damage to the unit, make sure the blower tube is in place before operating the unit.

OPERATING TIPS

- Ensure that the unit is not directed at anybody or any loose debris before starting the unit.
- Verify that the unit is in good working condition. Make sure the tubes and guards are in place and secure.
- · Always hold the unit with both hands when operating.
- To reduce the risk of hearing loss associated with sound level(s), hearing protection is required.
- Operate power equipment only at reasonable hours—not early in the morning or late at night when people might be disturbed. Comply with times listed in local ordinances. Usual recommendations are 9:00 am to 5:00 pm, Monday through Saturday.
- To reduce noise levels, limit the number of pieces of equipment used at any one time.
- To reduce noise levels, operate power blowers at the lowest possible speed to do the job.
- Use rakes and brooms to loosen debris before blowing.
- Conserve water by using power blowers instead of hoses for many lawn and garden applications, including areas such as gutters, screens, patios, grills, porches, and gardens.
- Watch out for children, pets, open windows or freshly washed cars, and blow debris safely away.
- Clean up after using blowers equipment.

AIR VENTS

Never cover air vents. Keep them free of obstructions and debris. They must always remain clear for proper motor cooling.

OPERATING THE BLOWER(SEE FIGURE 7)

Hold the blower firmly. Sweep from side to side with the nozzle several inches above the ground or floor. Slowly advance the unit, keeping the accumulated pile of debris in front of you. Most dry blowing operations are better suited to low speeds, rather than high speeds. High speed blowing is a better way to move heavier items like large debris or gravel.



A WARNING

- To avoid serious personal injury, do not wear loose-clothing or articles such as scarves, strings, chains, ties, etc., that could be drawn into the air vents. Tie back long hair to make sure it does not get drawn into the air vents.
- To avoid serious personal injury, ensure the unit is in OFF position and unplugged before clearing the impeller.
- To avoid serious personal injury, always wear gloves to protect yourself from the impeller blades or other sharp objects.

BATTERY & CHARGER MAINTENANCE


CHARGING THE BATTERY

A factory-new battery is not fully charged.


Recommendation: Fully charge the battery before using it with your power tool for the first time.

 Connect the charger to the power supply – mains voltage and operating voltage of the charger must be the same.

Operate the charger indoors only in dry locations at an ambient temperature between $10-40^{\circ}C$ (50-104°F).

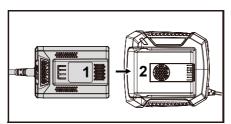

 Push the adapter (1) into the charger (2) until you feel noticeable resistance – then push it in until it stops.

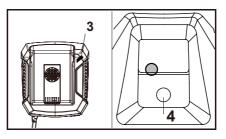

- The light emitting diode (3) on the charger comes on when the adapter is inserted see "Light Emitting Diode (LED) on Charger".
- Charging begins as soon as the digits starts to flash see "Light Emitting Diodes (LEDs) on Battery".

The charge time is dependent on a number of factors, including battery condition, ambient temperature, etc., and may therefore vary from the charge time in the "Specifications".

The battery warms up during operation. If a warm battery is inserted in the charger, it may be necessary to cool it down before charging. The charging process begins only after the battery has cooled down. The time required for cooling may prolong the charge time.

BATTERY & CHARGER MAINTENANCE

End of Charge


The charger switches itself off automatically when the battery is fully charged:

- Light emitting diodes on the battery turns off.
- The light emitting diode on the charger is solid Green.
- The charger's fan is switched off.

Remove the adapter from the charger.

BATTERY LEDs

The LEDs show the battery's capacity & any problem with the battery or the power tool being used.

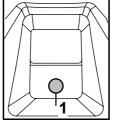

Press button (1) to activate the LEDs – the display goes off automatically after 5 seconds. The acoustic signal must sound briefly when the button is pressed (to confirm function) – see also "Acoustic Signal".

During Charging Process

The words showing the current battery capacity will begin to blink.

During Operation


LED will indicate the battery capacity.

If the LEDs glow continuously / flash


When there is an issue, the pack will show different fault codes - see "Troubleshooting".

- E0 BMS fault
- E1 Over-current (discharging)/(charging)
- E2 Communication fault (with charger or external tools)
- E3 Over-voltage of cell
- E4 Low-voltage of cell
- E5 Bad consistency of cell
- E6 External tools abstract electricity
- HI Over temperature of battery
- Lo Low temperature of battery

CHARGER LEDs

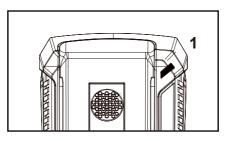

The Charger LED Lights will illuminate in specific order to communicate the current battery status. They are as follows:

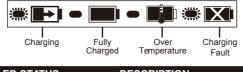

LED STATUS	DESCRIPTION
Blinking Green	Charging
Solid Green	Fully Charged
Solid Red	Over Temperature
Blinking Red	Charging Fault

ENVIRONMENTALLY SAFE BATTERY DISPOSAL

The following toxic and corrosive materials are in the batteries used in this blower battery pack: Lithium-Ion, a toxic material.



A WARNING

All toxic materials must be disposed of in a specified manner to prevent contamination of the environment. Before disposing of damaged or worn out Lithium-Ion battery packs, contact your local waste disposal agency, or the local Environmental Protection Agency for information and specific instructions. Take the batteries to a local recycling and/or disposal centre, certified for lithium-ion disposal.

🛦 W A R N I N G

If the battery pack cracks or breaks, with or without leaks, do not recharge it and do not use. Dis pose of it and replace with a new battery pack. DO NOT ATTEMPT TO REPAIR IT!

To avoid injury and risk of fire, explosion, or electric shock, and to avoid damage to the environ ment:

- Cover the battery's terminals with heavy-duty adhesive tape.
- DO NOT attempt to remove or destroy any of the battery pack components.
- DO NOT attempt to open the battery pack.
- If a leak develops, the released electrolytes are corrosive and toxic. DO NOT get the solution in the eyes or on skin, and do not swallow it.
- DO NOT place these batteries in your regular household trash.
- DO NOT incinerate.
- DO NOT place them where they will become part of any waste landfill or municipal solid waste stream.
- Take them to a certified recycling or disposal centre.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
	Battery is not secure.	Check to ensure the latches are tightly secured in to place on the back of the blower and the battery. (Reference Page 11 of the instruction manual).
Unit will not start.	Battery is not charged.	Charge the battery pack according to the instructions included with your battery.
	Defective power switch.	Return to place of purchase or return the unit to a repair center.
Unit will not blow.	Blocked tube.	Clear the blockage.
Cruise Control Lever doesn't work.	The screw is loose.	Tighten the screw with a phillips head screwdriver.

LIMITED WARRANTY



GREENWORKS[™] hereby warranties this product, to the original purchaser with **proof of purchase**, 2 year commercial power train warranty, 1 year commercial battery warranty against defects in materials, parts or workmanship. GREENWORKS[™], at its own discretion will repair or replace any and all parts found to be defective, through normal use, free of charge to the customer. This warranty is valid only for units which have been used for personal use that have not been hired or rented, and that have been maintained in accordance with the instructions in the owners' manual supplied with the product from new.

2 Year Limited Power Train Warranty Coverage:

- Motor
- PCB Boards
- Gear Box
- 2 years from the date of purchase (non transferable)

1 Year Limited Battery Warranty Coverage:

- Greenworks Commercial Battery Packs (GL 200, GL 250, GL 300, GL 400, GL 500, GL 900)
- 1 year from the date of purchase (non transferable)

60 Day Limited Wearable Parts Warranty Coverage:

- Bars
- Blades
- Guards
- Chains
- Bump Feed Heads
- Tines
- 60 Days from date of purchase (non transferable)

Warranty Exclusions, Limitations and Rights:

- 1. All warranties may not be transferred by the consumer to any subsequent purchaser.
- 2. Parts or components not supplied by the warrantor, or parts or components that have been modified.
- 3. Any failure resulting from the use of improper tools or improper repair procedures.


- Any failure or part that has become inoperative due to accident, impact, abuse, misuse, neglect, mishandling, dulling of cutting edges, or failure to operate the product in accordance with the information provided in the instruction manual supplied with the product.
- Normal deterioration of the exterior due to use or exposure, and any repairs made necessary by normal wear, improper maintenance, improper lubrication, improper storage, dirt, abrasives, impact, moisture, water, rain, snow, rust, corrosion, varnish, or other similar conditions.
- 3. Routine maintenance items such as lubricants, blade sharpening.
- 4. The unit, if it has not been operated and/or maintained in accordance with the owner's manual.
- 5. Improper voltage for electric products and batteries that have been exposed to temperatures beyond those specified in the product's instruction manual, batteries that have not been properly charged or batteries that have reached their useful life.

GREENWORKS HELPLINE:

Warranty service is available by calling our toll-free helpline, at 1-855-470-4267.

TRANSPORTATION CHARGES:

Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. It is the purchaser's responsibility to pay transportation charges for any part submitted for replacement under this warranty unless such return is requested in writing by **GREENWORKS**.

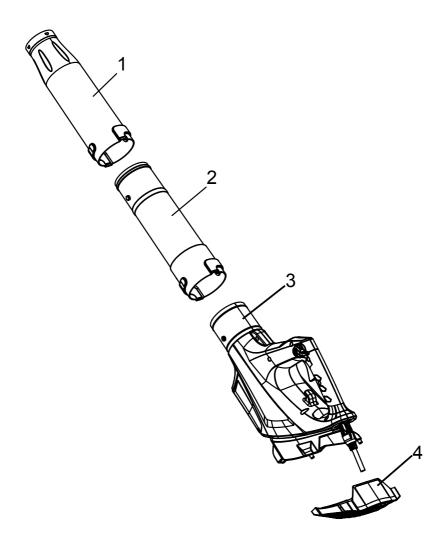

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	341071816	Lower blower tube	1
2	341061816	Upper blower tube	1
3	313021816	Housing Assembly	1
4	341031807	Air Inlet Vent	1

GREENWORKS COMMERCIAL

Greenworks Tools PO Box 1238 Mooresville, NC 28115

TOLL-FREE HELPLINE: 1-855-470-4267

Rev: 00 (05-05-15)

Printed in China on 100% Recycled Paper