

DALI SONIK




QUICK START GUIDE

SONIK 1
SONIK 3
SONIK 5
SONIK 7
SONIK 9
SONIK ON-WALL
SONIK CINEMA







IN ADMIRATION OF MUSIC

   
1. Pack Contents

SONIK	1	3	5	7	9	ON-WALL	CINEMA
Speaker(s) pr. carton	x 2	x 2	x 2	x 1	x 1	x 2	x 1
	x 2	x 2	x 2	x 1	x 1	x 2	x 1
	x 8						
	x 8	x 8	x 8	x 4	x 4	x 8	x 4
			x 8	x 4	x 4		
			x 8	x 4	x 4		
			x 8	x 4	x 4		
			x 4	x 2	x 2		
 5 mm 10 mm			x 1	x 1	x 1		
	✓	✓	✓	✓	✓	✓	✓

2. Position

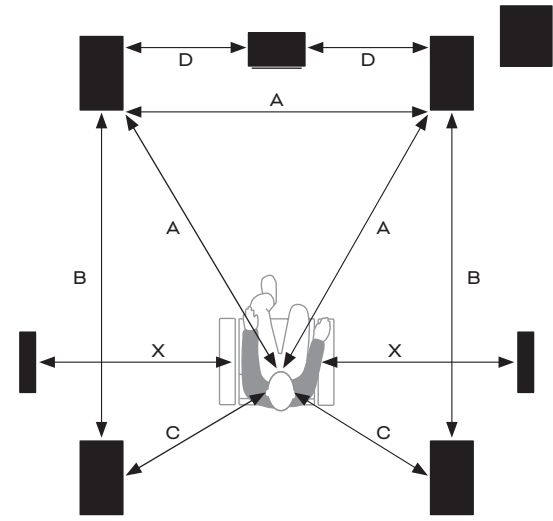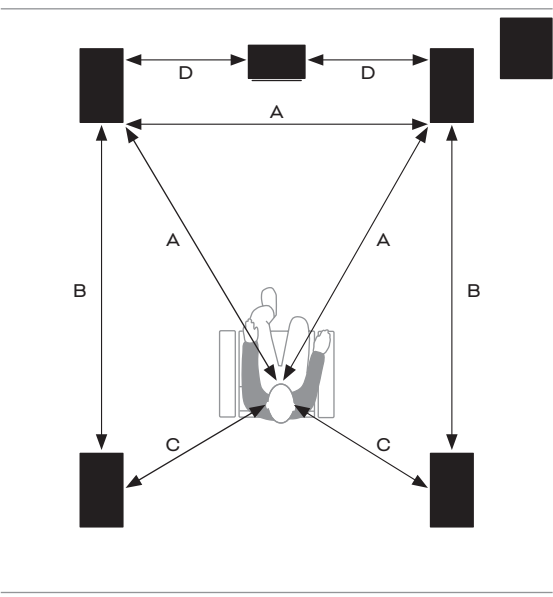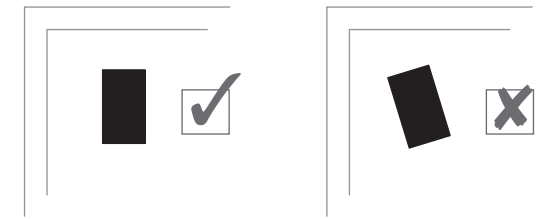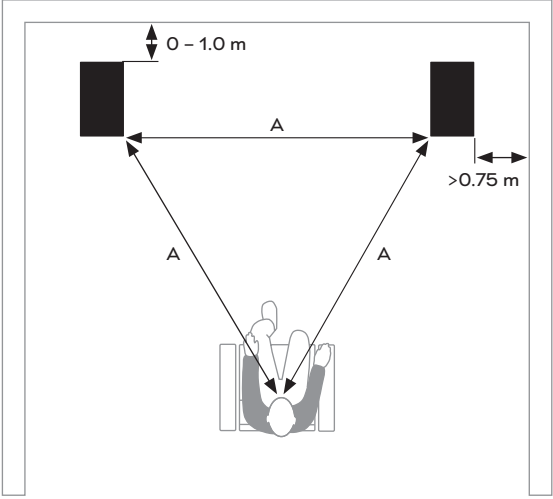


DALI SONIK

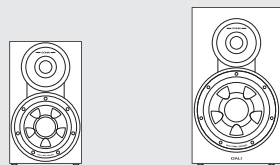

SONIK 1


SONIK 3

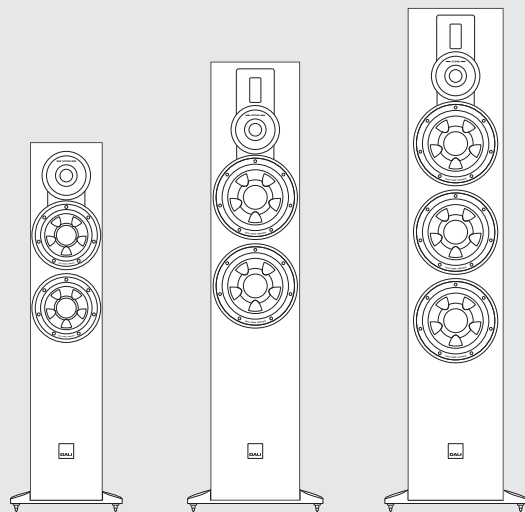


SONIK 5

SONIK 7

 SONIK 9



SONIK CINEMA

 


SONIK ON-WALL


1112-2025 ITEM NR. 051036-0-1

3. Mounting (stand/shelf)

SONIK 1
SONIK 3
SONIK CINEMA

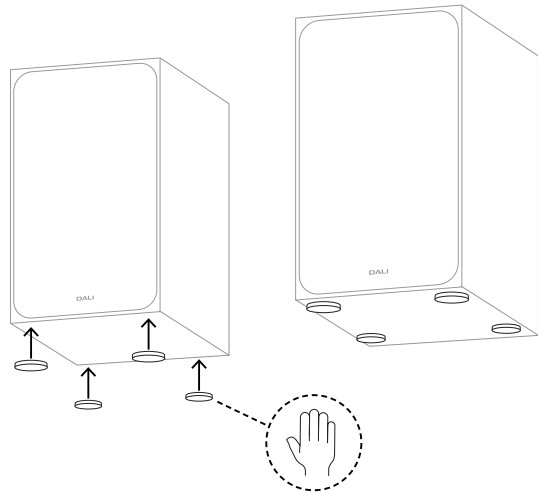


Remember to remove the dome protector

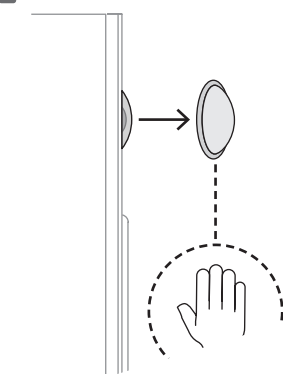


DALI SONIK
User Manual

3. Mounting (wall)

SONIK 1

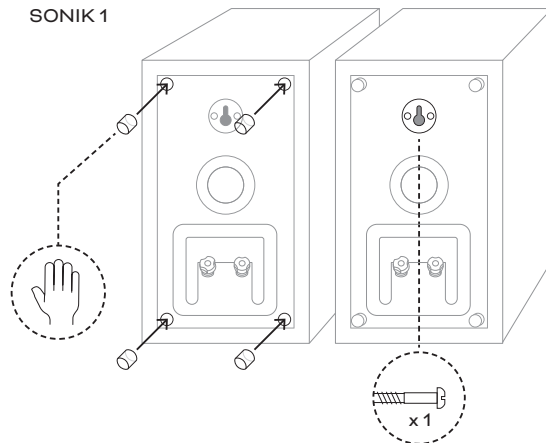


SONIK ON-WALL


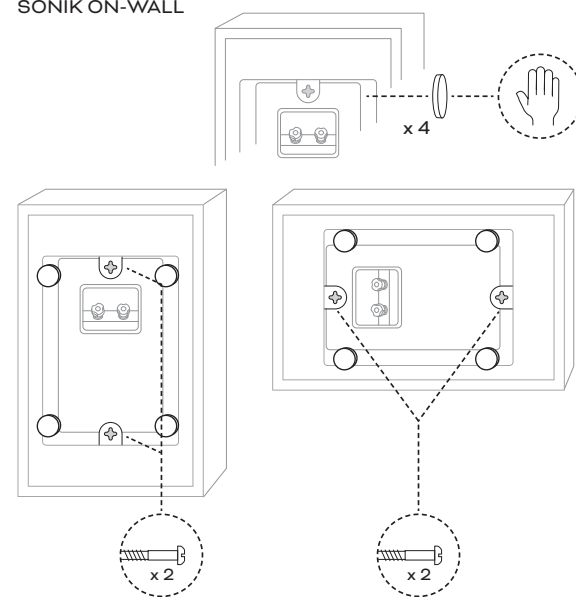


3. Mounting (floor)

SONIK 5
SONIK 7
SONIK 9


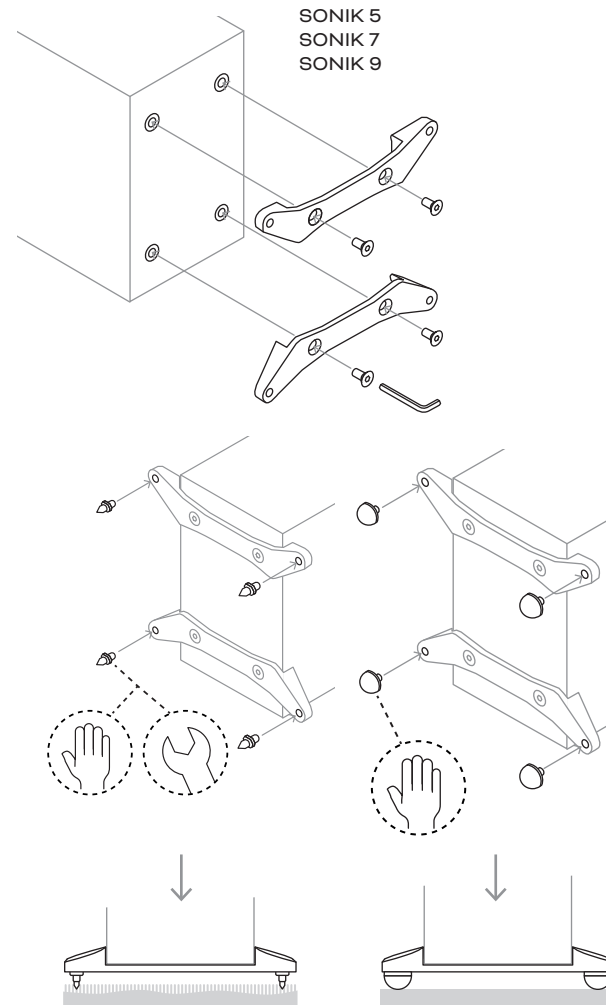


4. Wiring

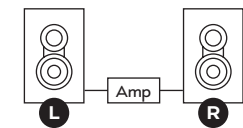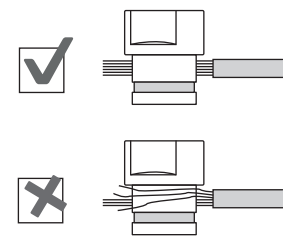

RIGHT
speaker

LEFT
speaker

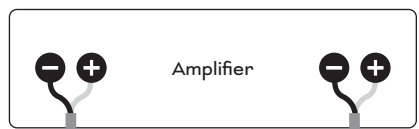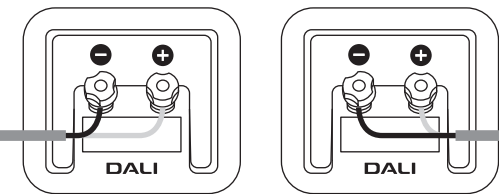

Amplifier