




SET UP INSTRUCTIONS

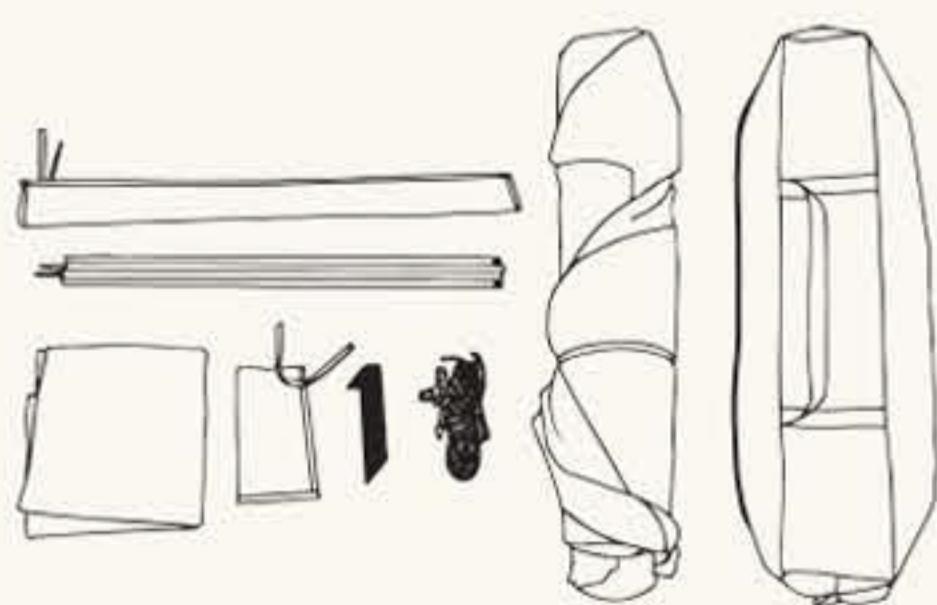


1. Remove the tent and all accessories from bag.

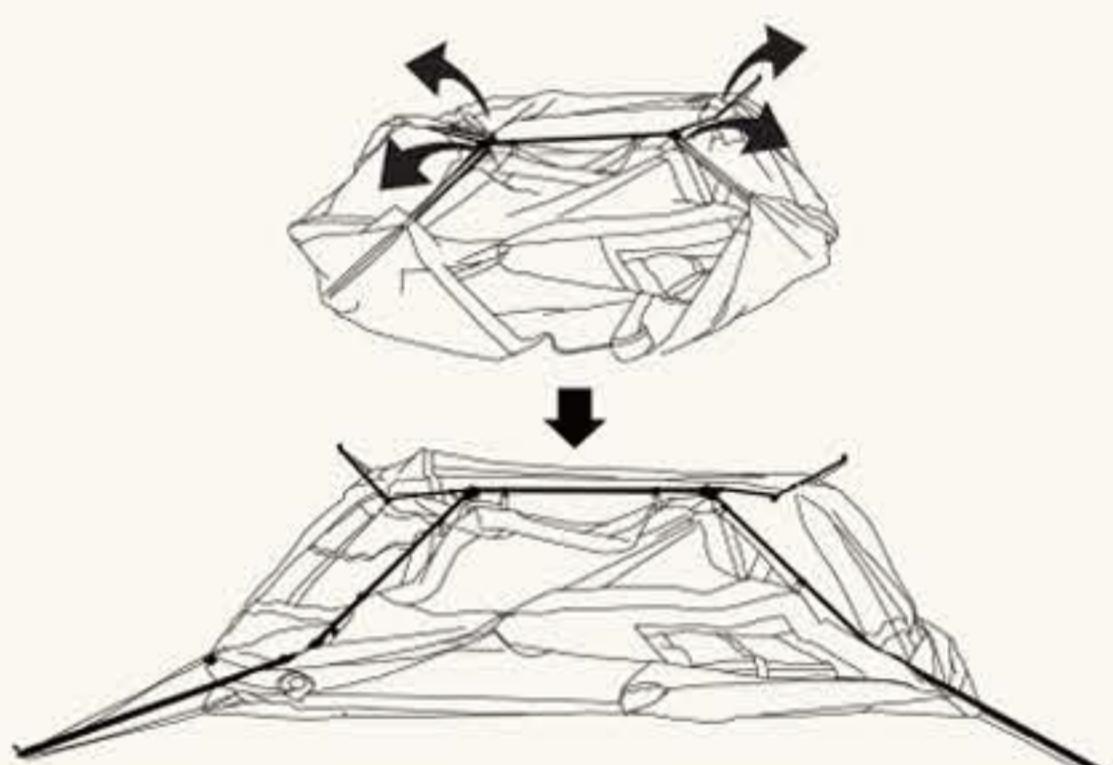


2. Lay the tent flat on the ground and unfold the four corners.

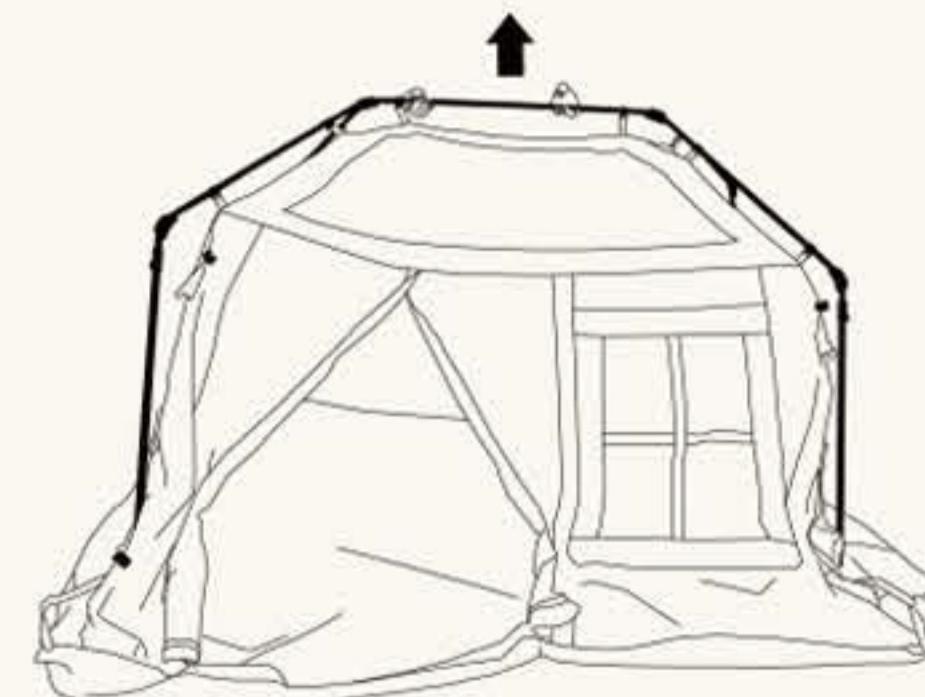

3. Lift the middle bar upwards from the center of the tent until it stands on all four legs.

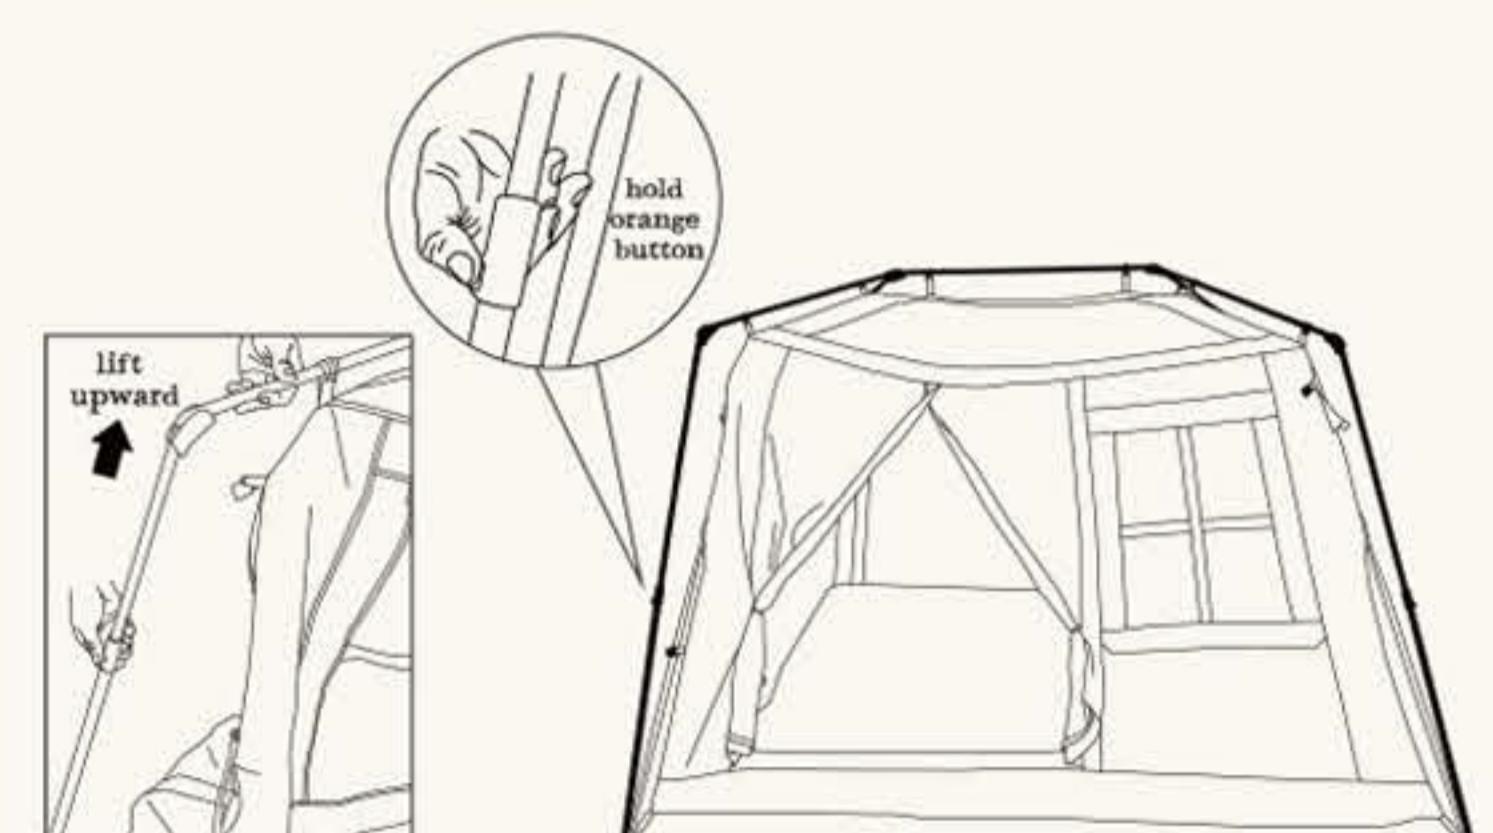


4. On each leg, hold down the orange button and extend the poles until they click into place.

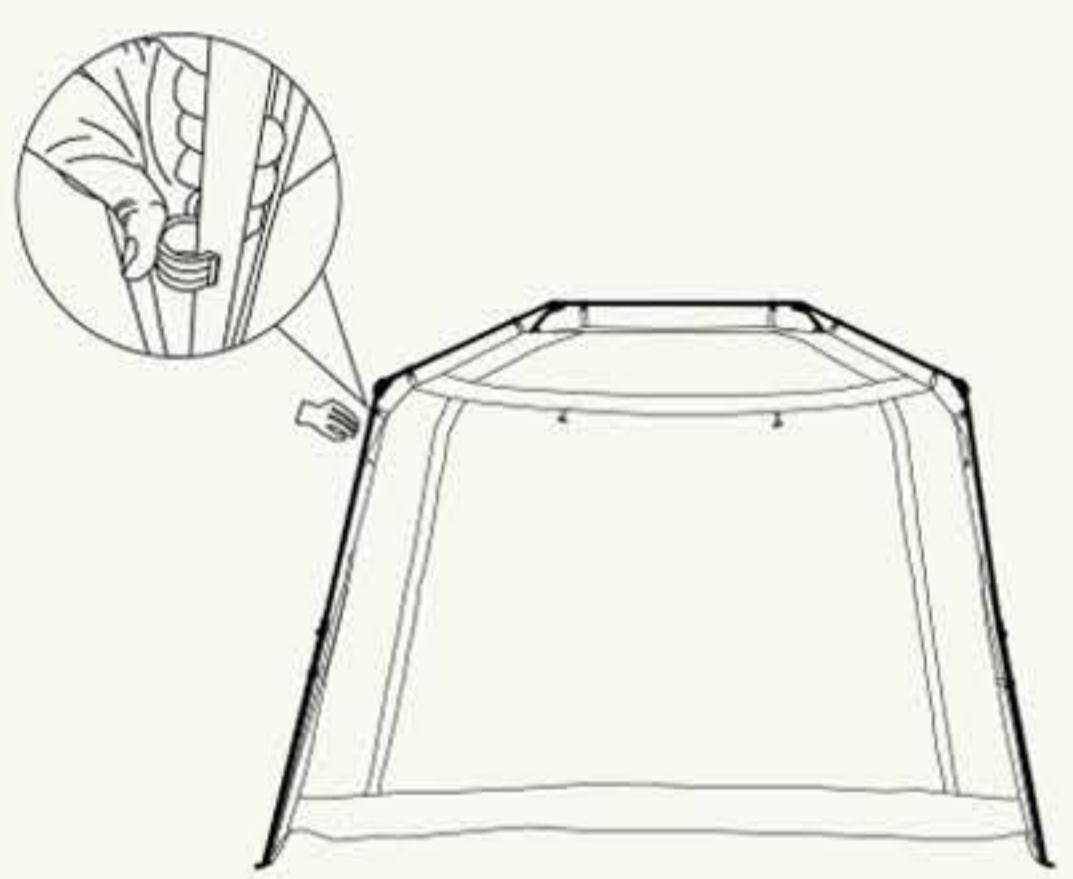


5. Buckle the top & bottom hooks on each side of the tent to their corresponding legs.



6. Attach the top vent cover by hooking corners to the four plastic rings on the frame.

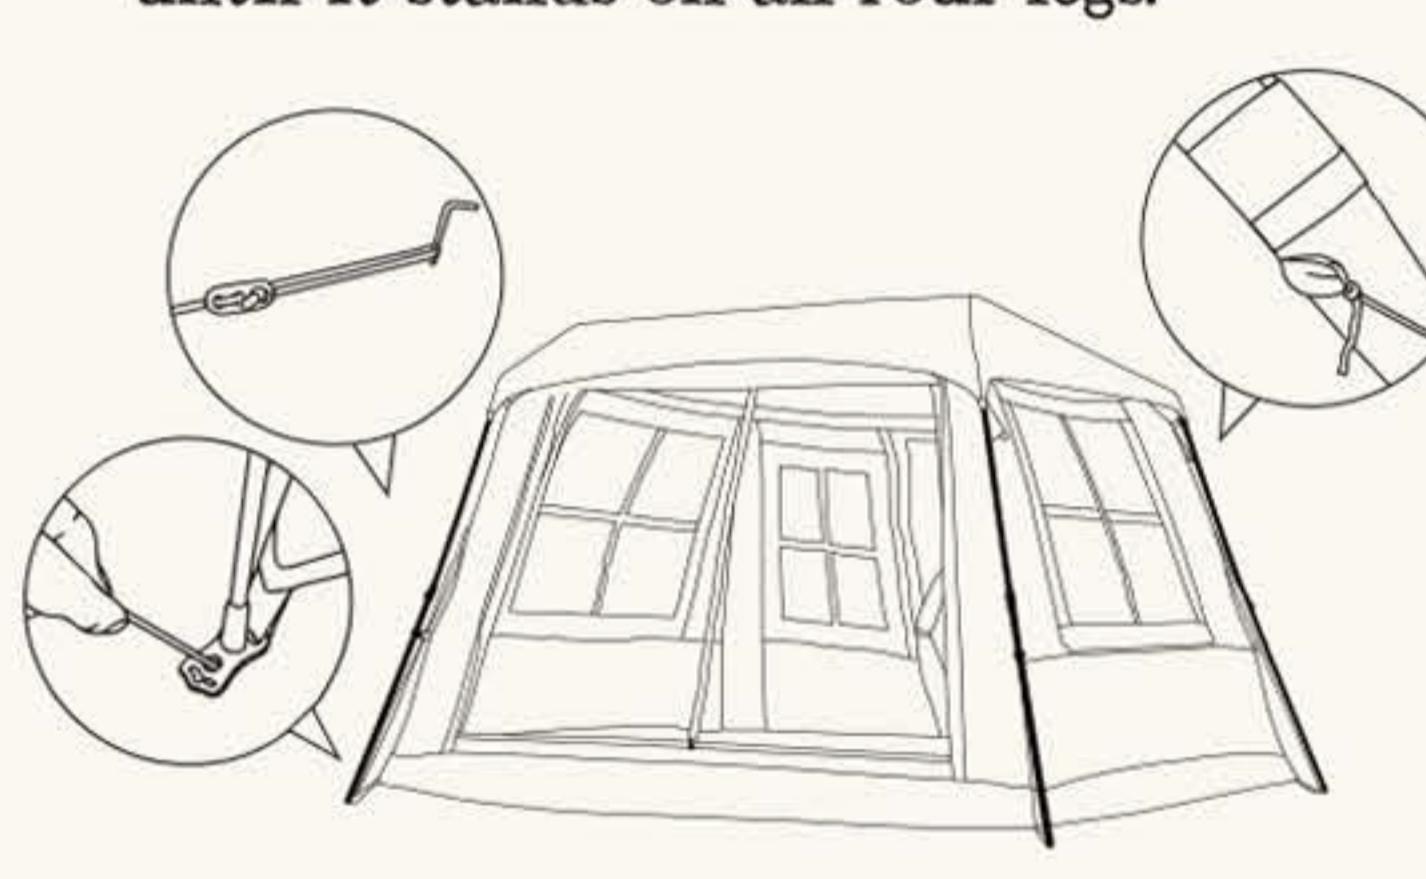


7. Add the stakes to the four corners of tent frame. Tie adjustable cords to the four loops on the tent frame and secure in ground with stakes.

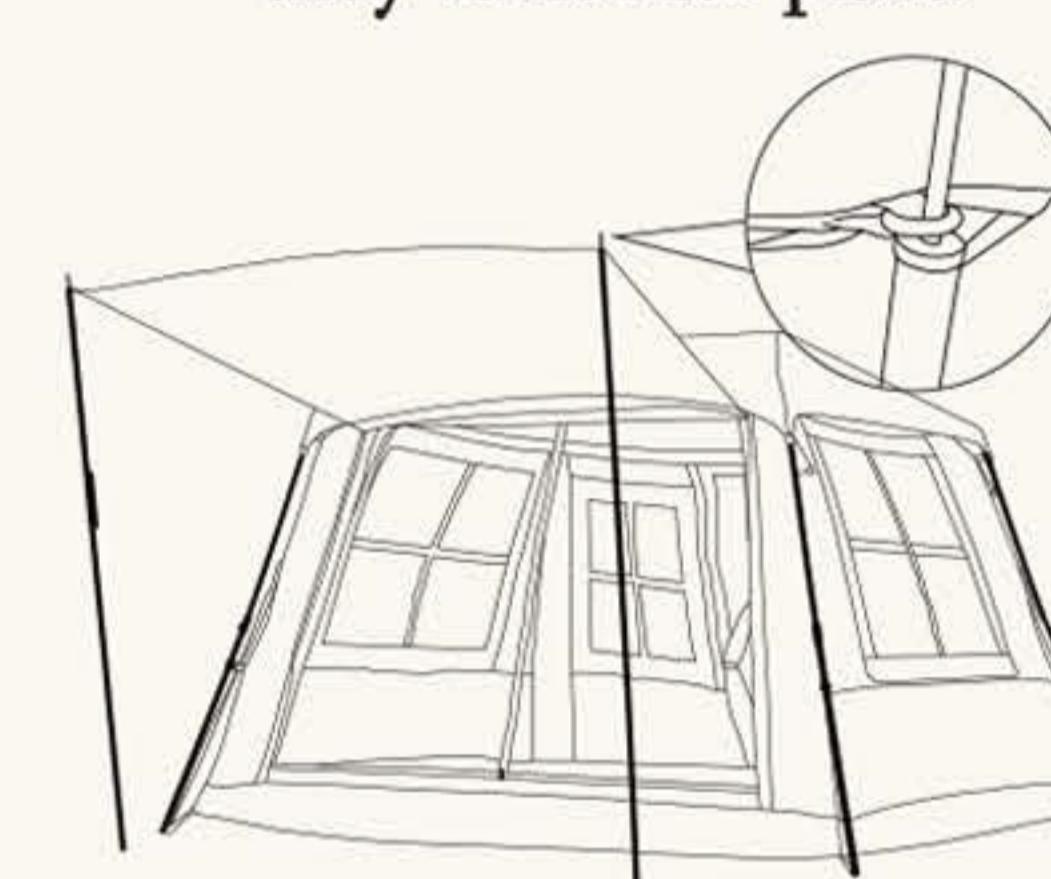

8. Assemble the two additional poles and loop the tent door grommets over the silver ends of the poles. Secure with the adjustable cord and stakes.


BREAK DOWN INSTRUCTIONS

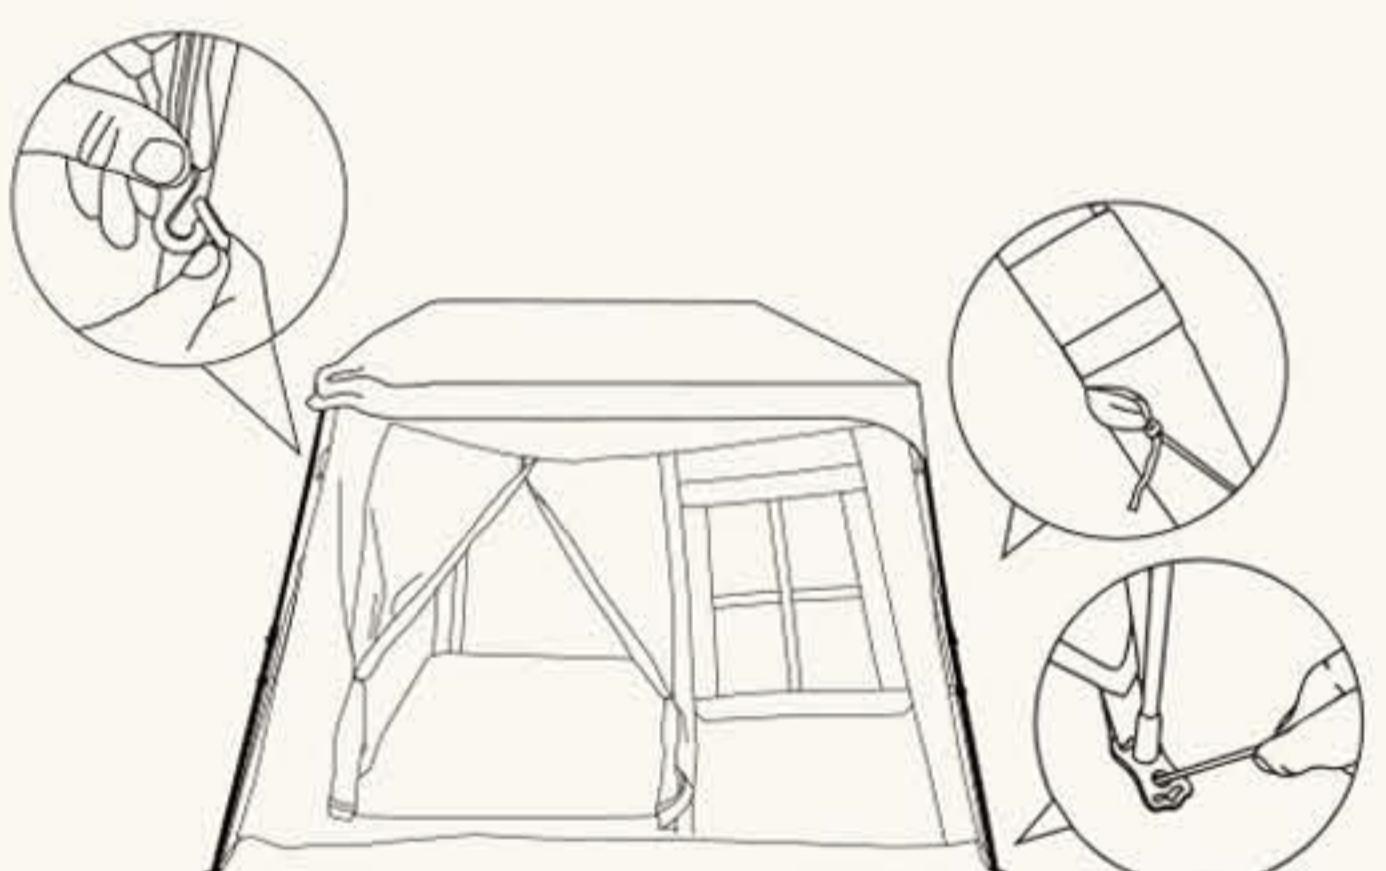


1. Remove the top vent cover, cords, and stakes.




2. Detach the two hooks from frame legs on each corner.

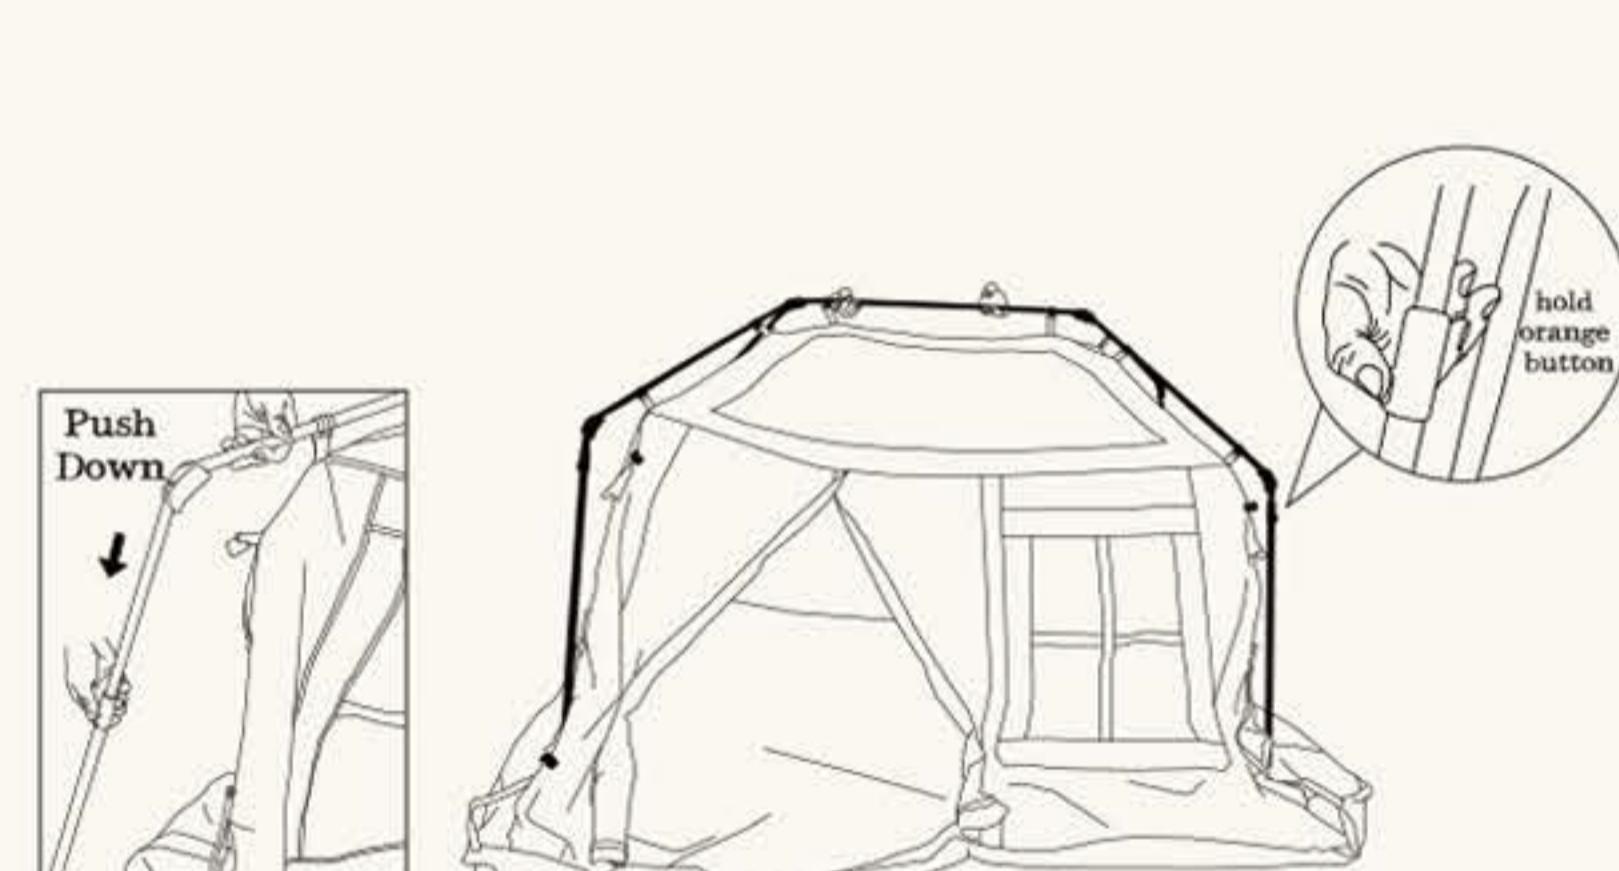


3. On each leg, hold down the orange button to retract.

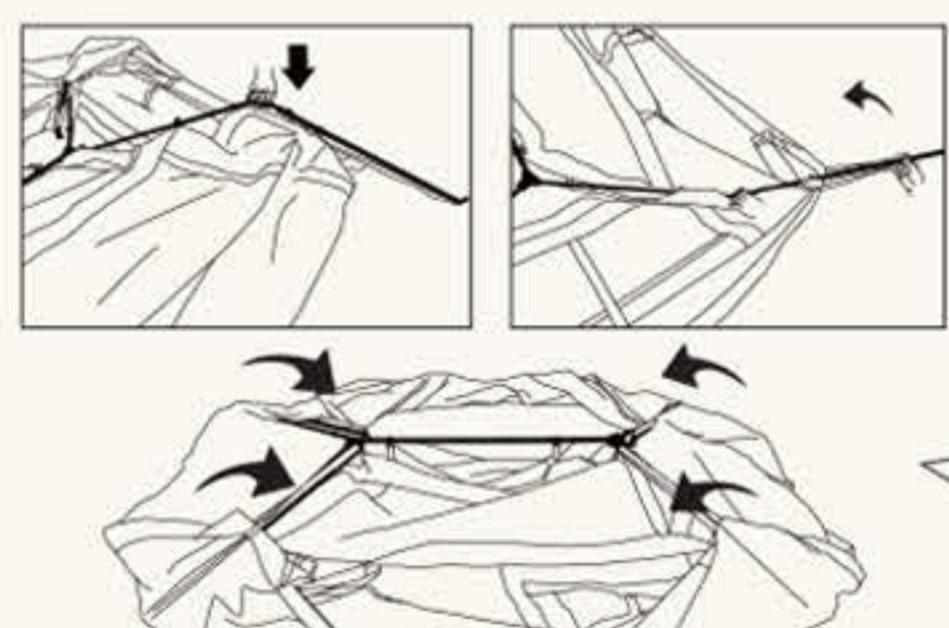

4. Push the tent downward until flat. Fold the legs inward towards the center.

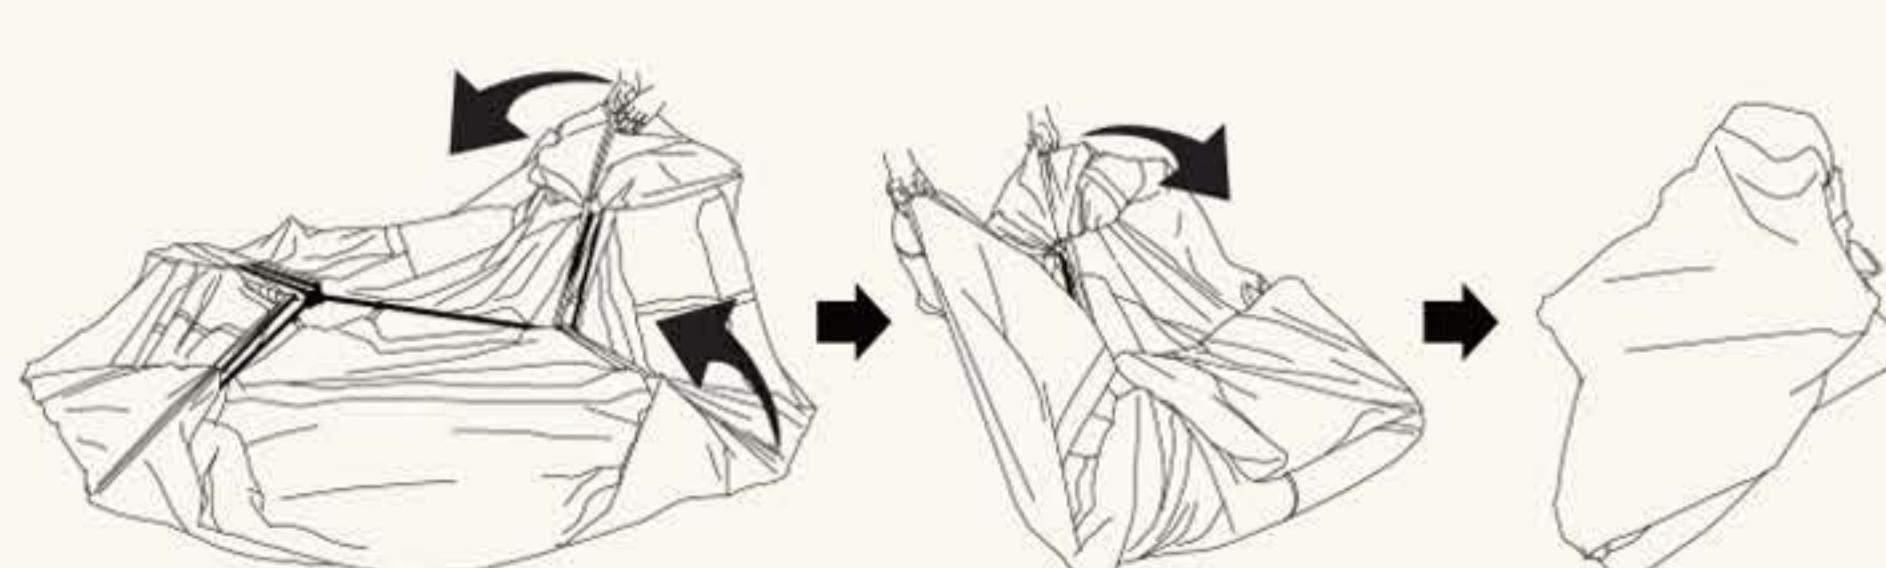

5. Fold the poles inward again, one at a time and wrap the excess material around them.

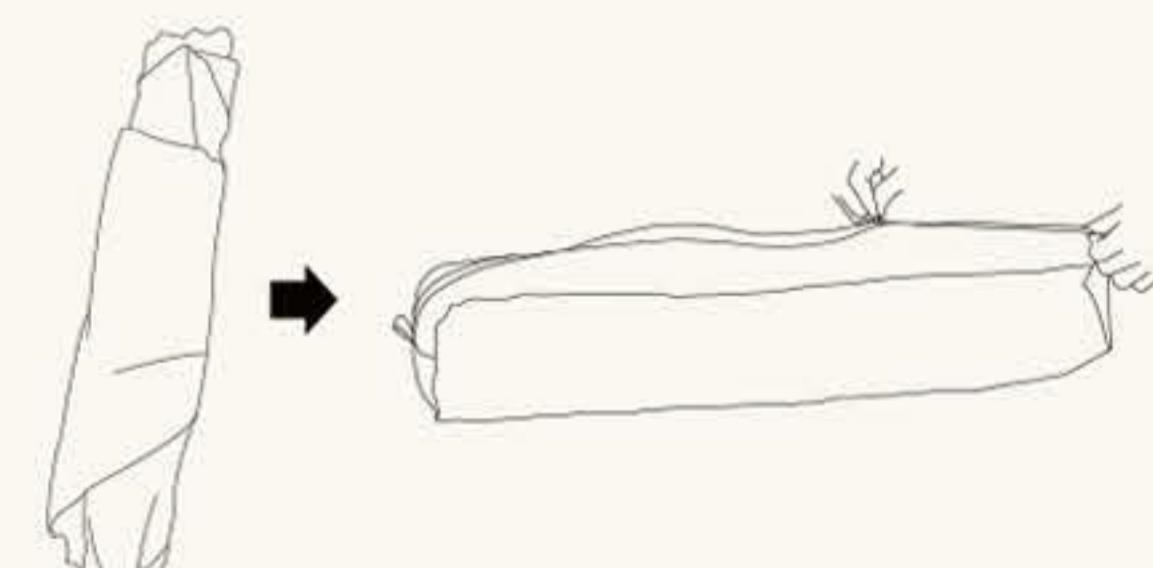

- Secure the bundle with strap and return to the storage bag.