




SET UP INSTRUCTIONS

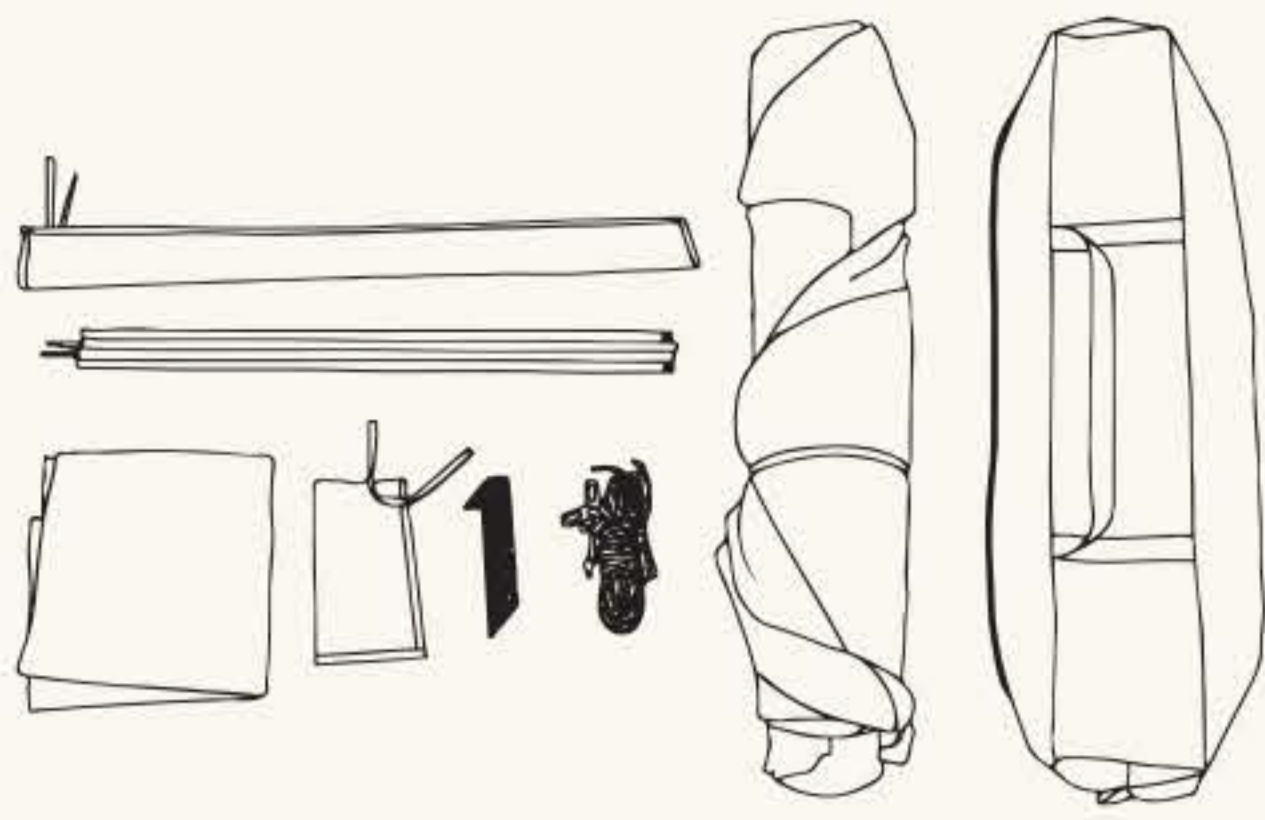


1. Remove the tent and all accessories from bag.

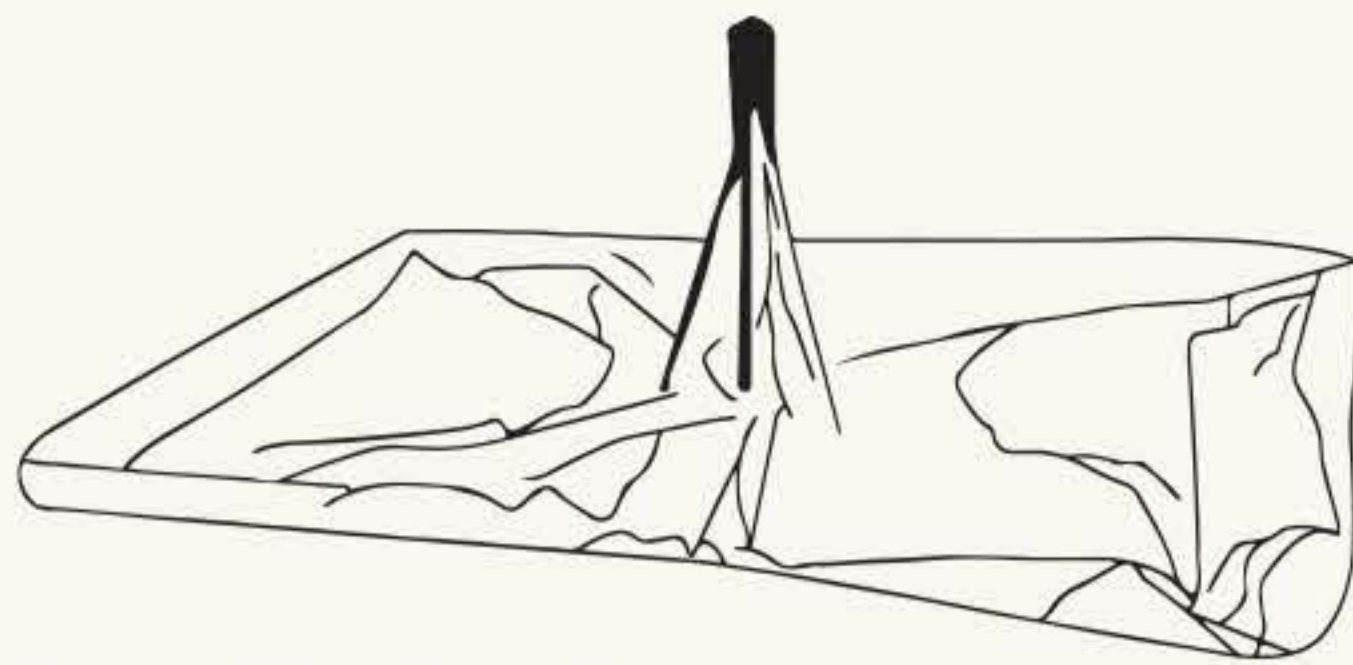

2. Lay the tent flat on the ground and unfold the four corners.

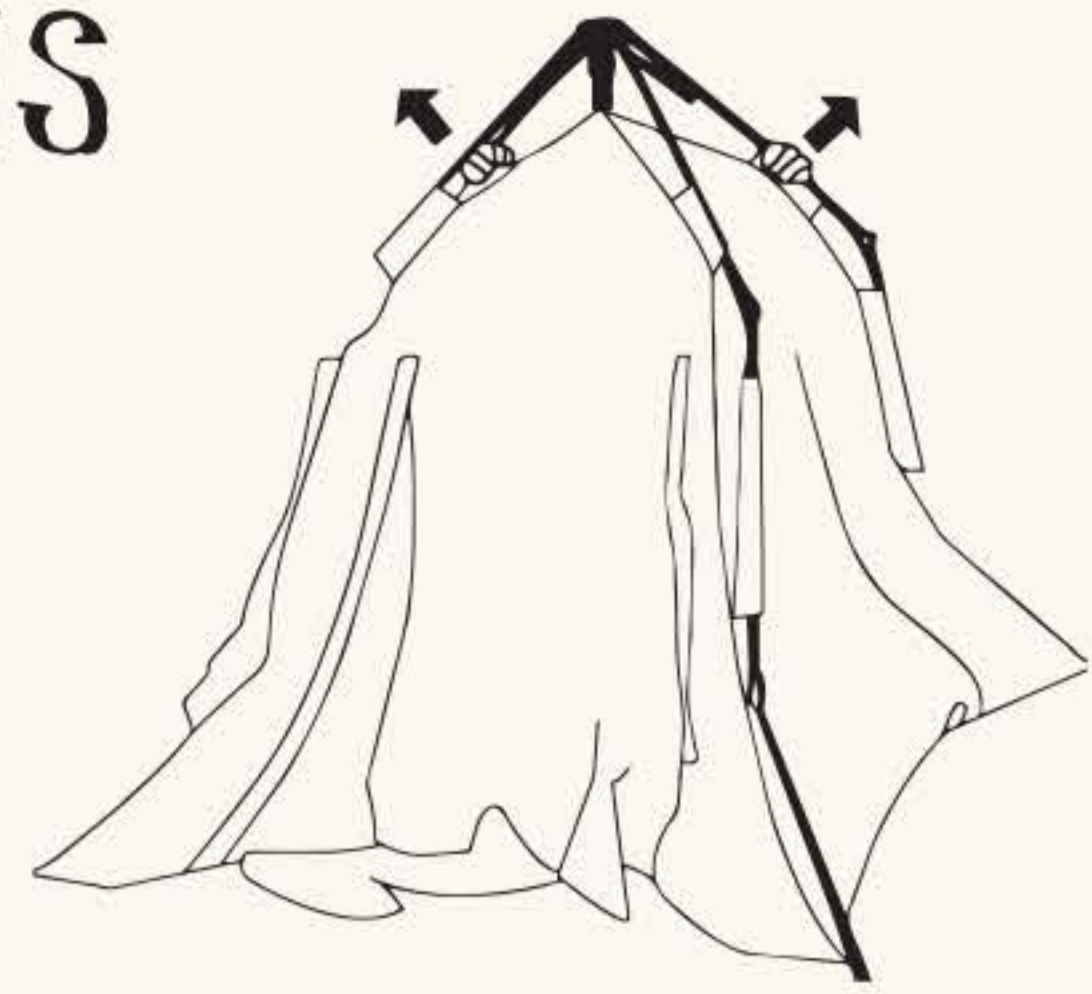

3. Lift 2 adjacent poles up from the center base until the frame clicks into place.

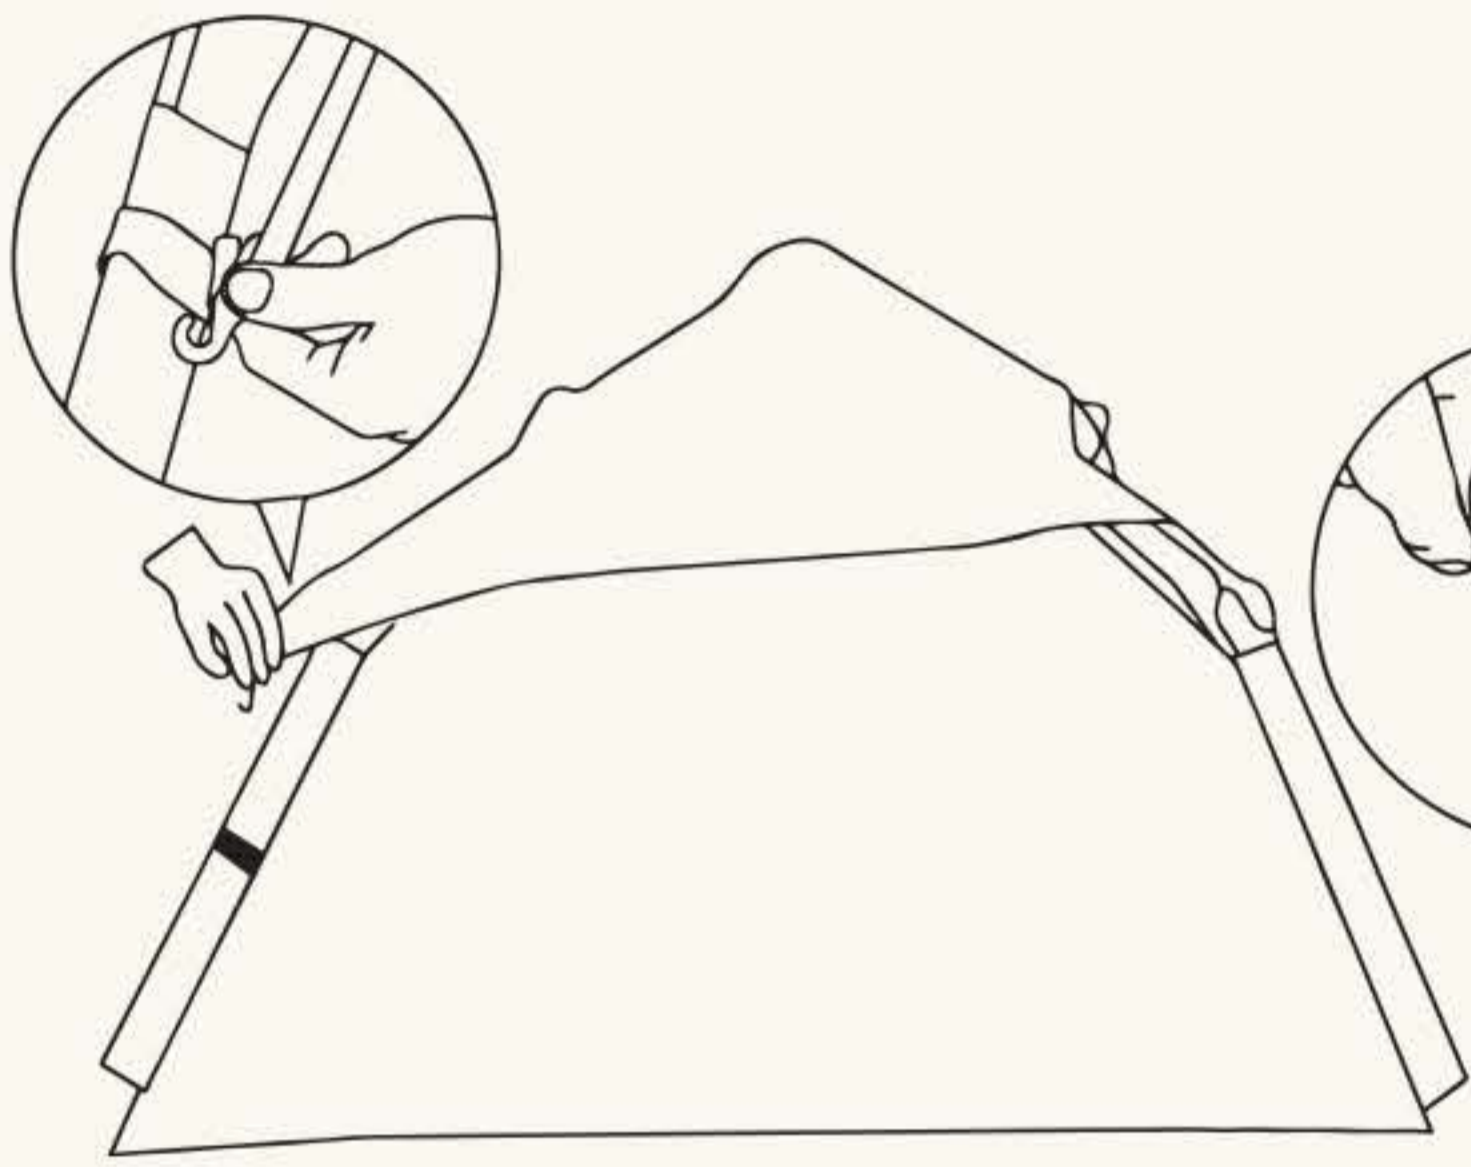

4. Attach the top vent cover by hooking corners to the four outer bands on the frame.



5. Add the stakes to the four corners of tent frame. Tie adjustable cords to the four loops on the tent frame and secure in ground with stakes.




6. Assemble the two poles and loop the tent door grommets over the silver ends of the poles. Secure with the adjustable cord and stakes.


BREAK DOWN INSTRUCTIONS




1. Remove the top vent cover, cords, and stakes.

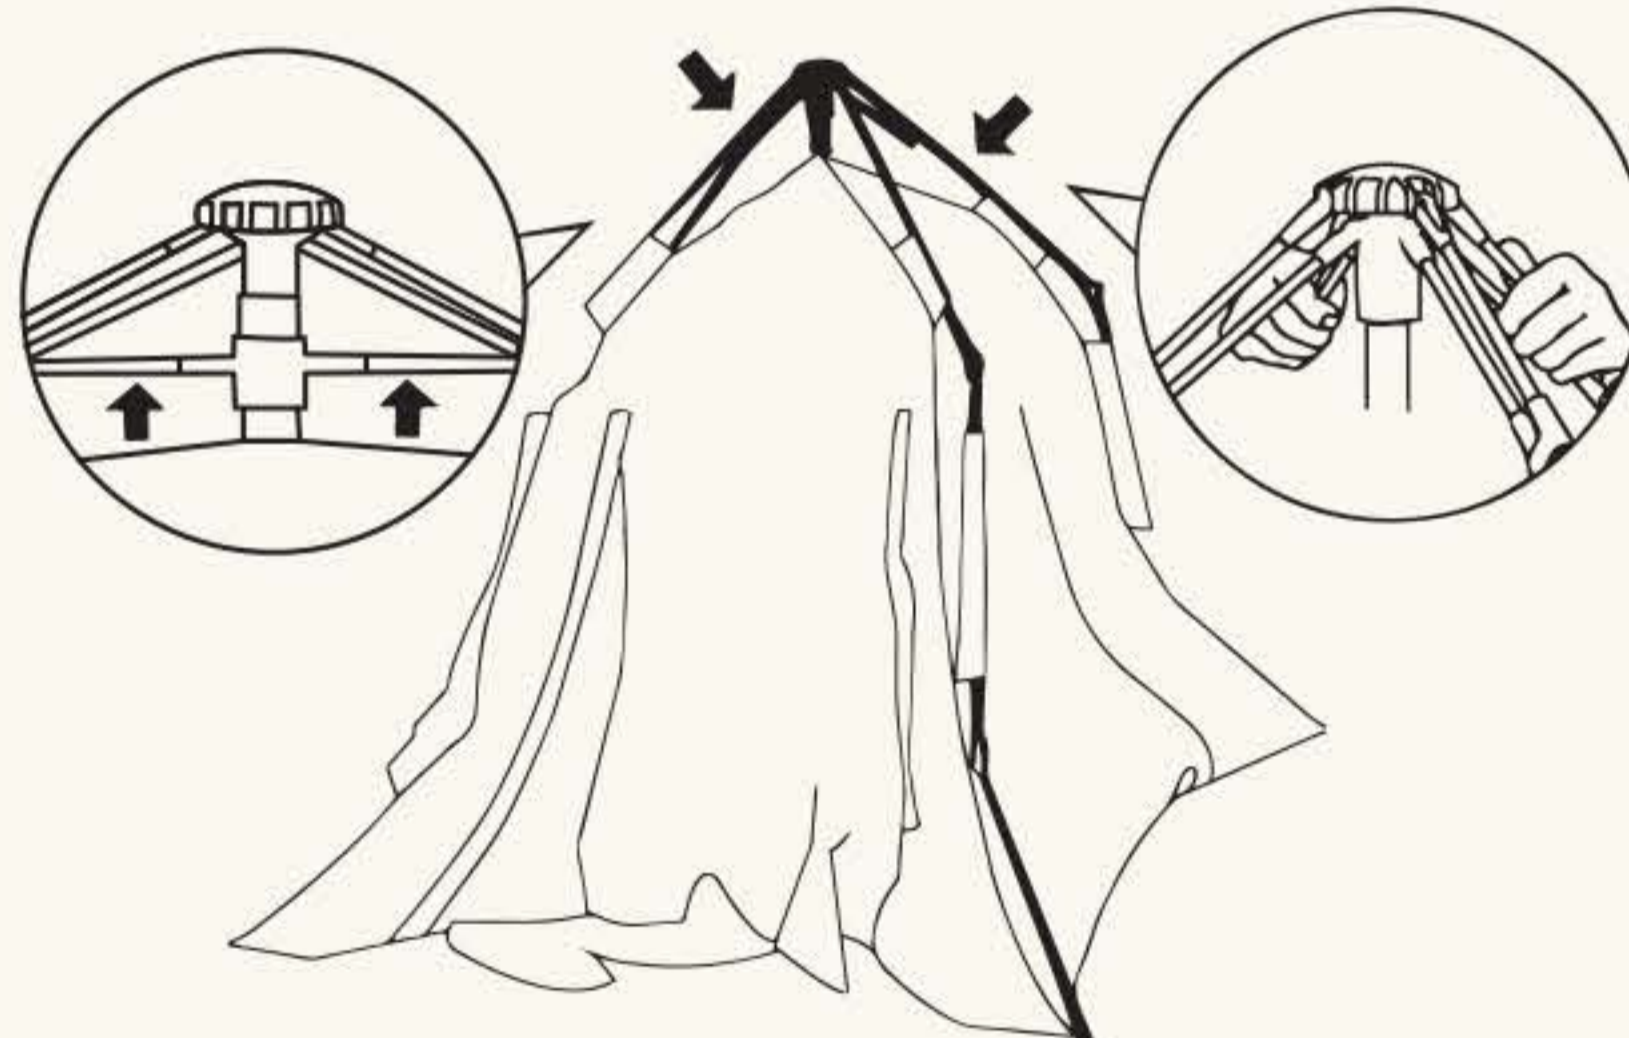


2. Squeeze the top and bottom adjacent poles near the center of the top base up to release the frame.

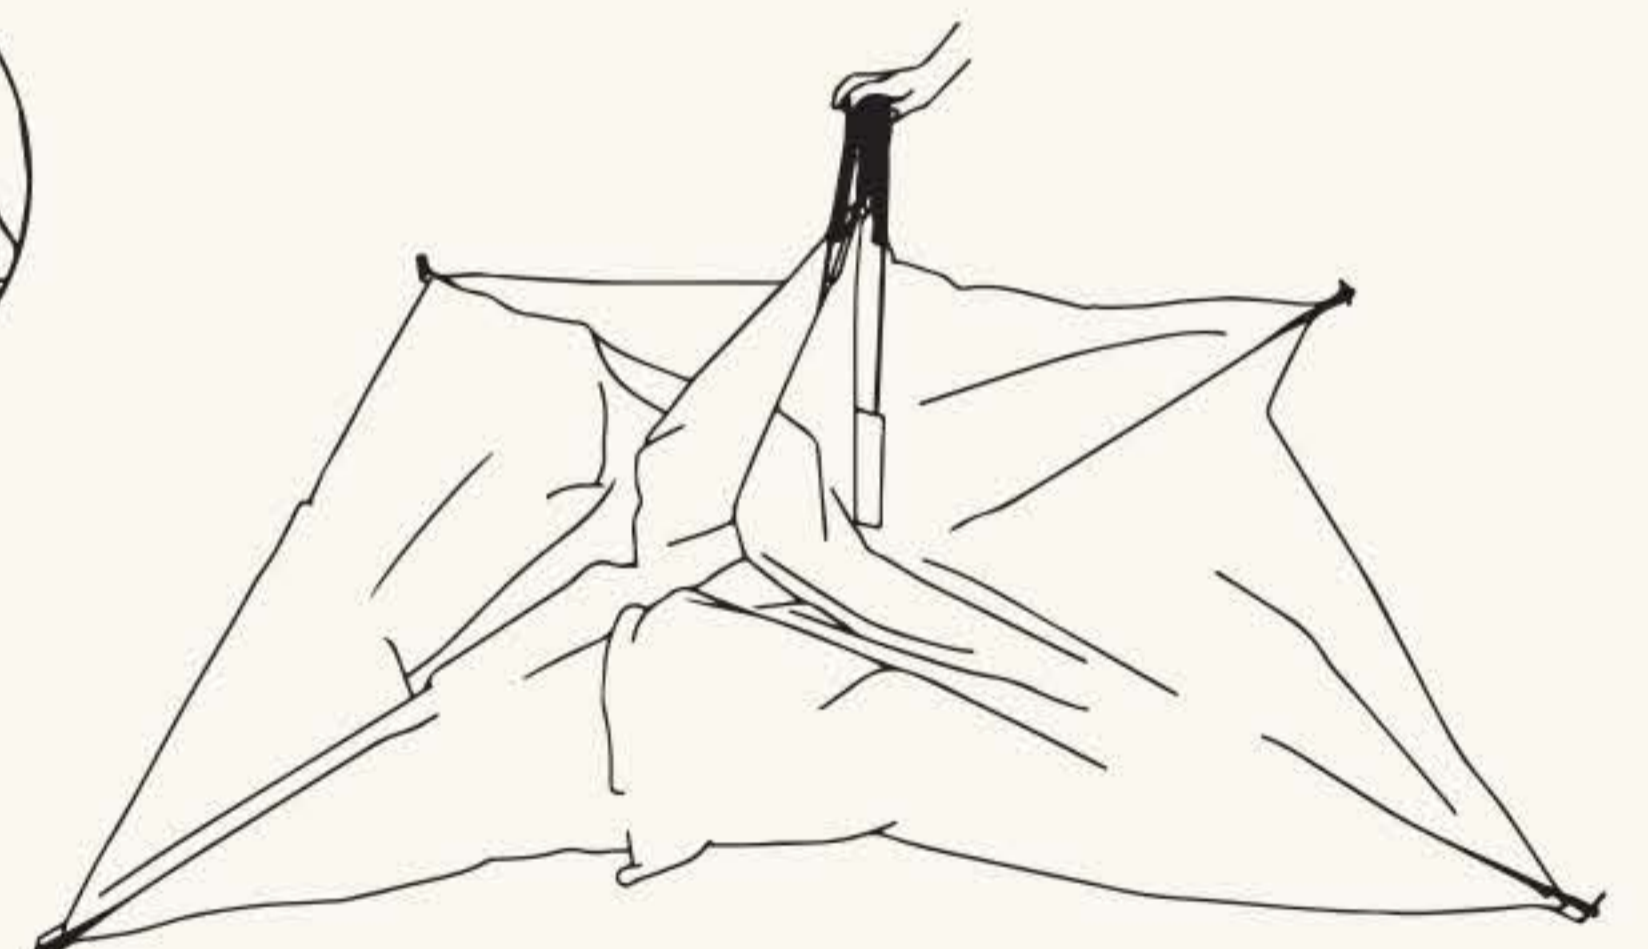

3. All four poles will release to lay flat.

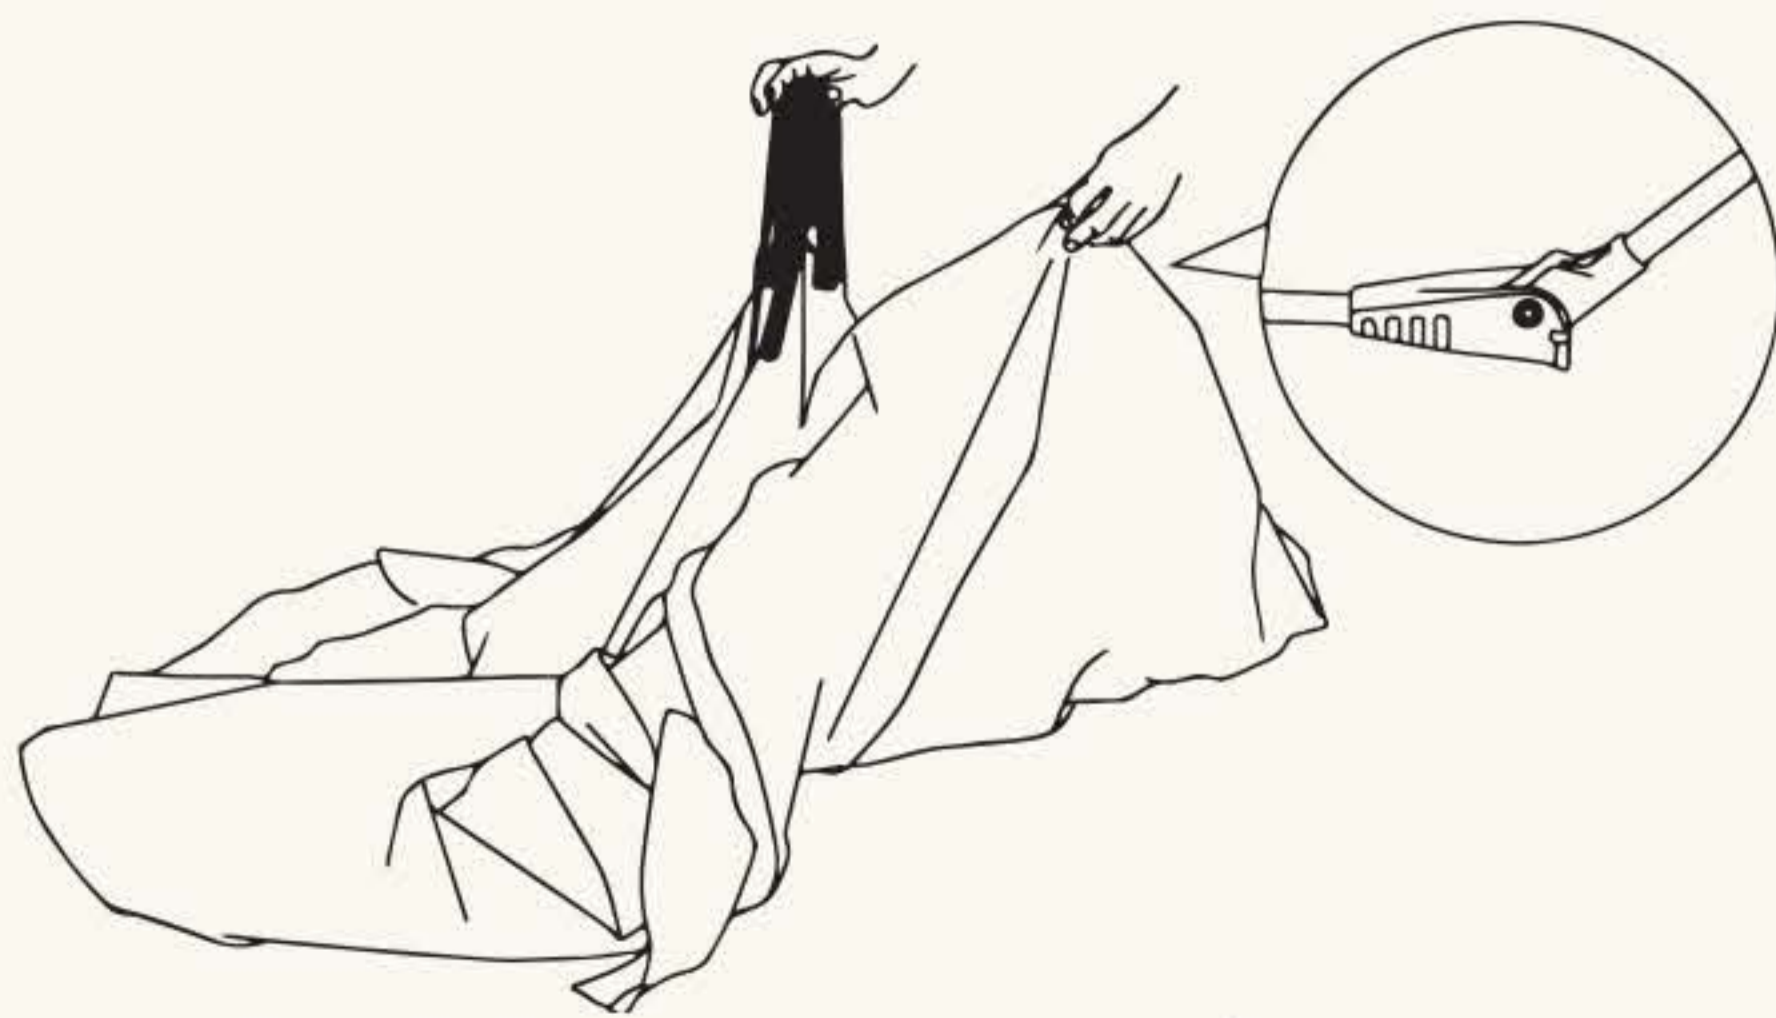

4. Pull each of the outermost joints outward to release and fold inward towards the center.

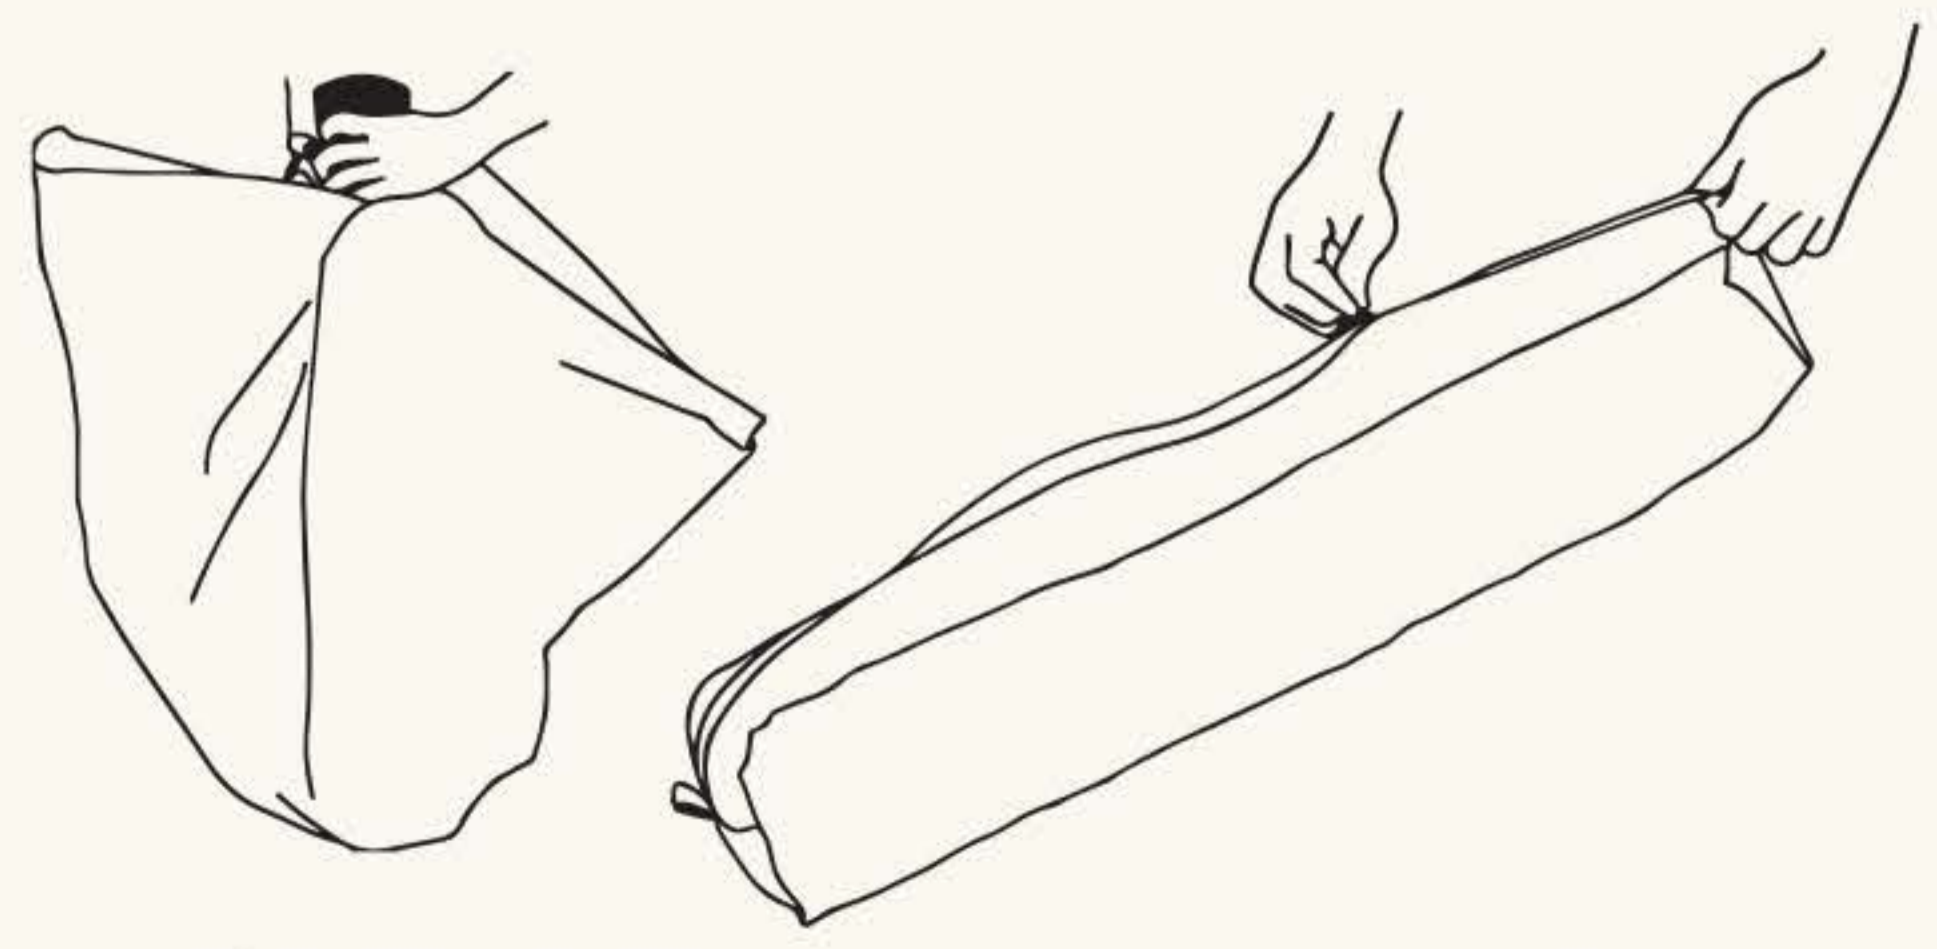

5. Tightly fold all corners up to the center base and return to carry bag with all accessories for safe keeping.