




# MONITOR ARMS

## Installation & User Manual

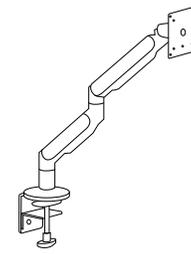


## SINGLE MONITOR ARM


The tools needed to assemble the monitor arm(s) can be found inside a removable sleeve in the lower arm. The driver needed to attach the monitor(s) to the monitor mounting plate is not included in this box.

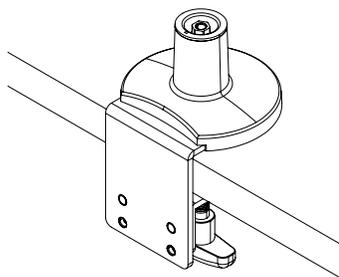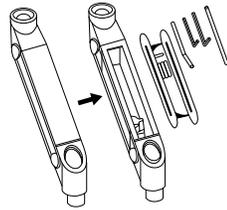


1. Attach base clamp to table top. Tighten clamp to hold in place.

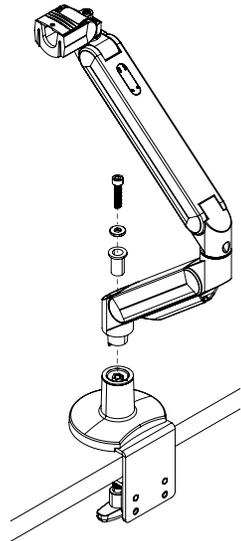


2. Insert the monitor arm into the base clamp. Slip the black bushing, M8 washer and M8x35mm screw into the opening in the monitor arm. Tighten the M8 screw in place using the provided tools.

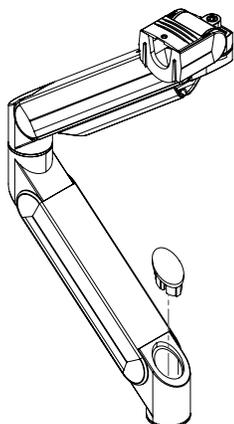



3. Insert the rubber cap into the opening in the monitor arm.

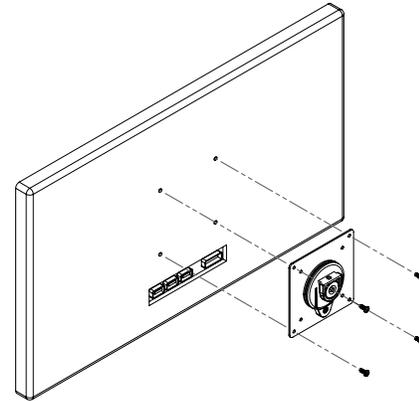

4. Attach the monitor mounting plate to the back of the computer monitor using four provided M4x10mm screws.

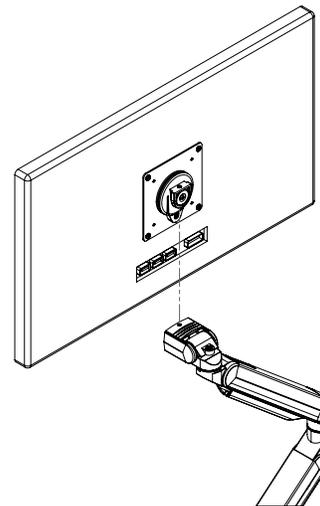


5. Gently press down the monitor mounting plate into the opening at the top of the monitor arm. Note the locking plate at the top of the monitor arm may be blocking the opening and will need to be slid into the unlock position to expose the opening.

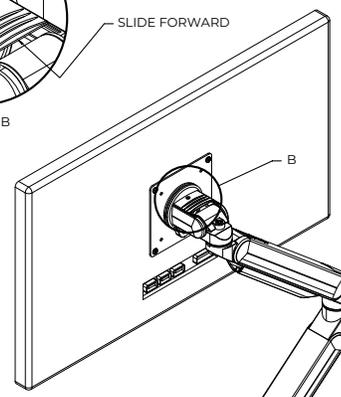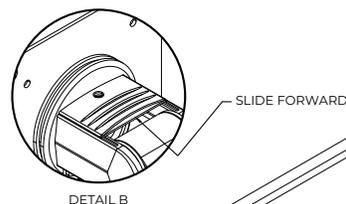


- b. Secure the monitor mounting plate to the monitor arm using the locking plate.

# MONITOR ARMS


Installation & User Manual

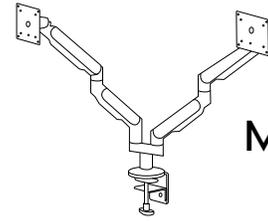

## DUAL MONITOR ARM

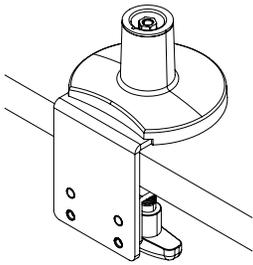


**1.** Attach base clamp to table top. Tighten clamp to hold in place.

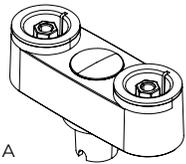


**2.** Assemble the branch adapter to the base clamp.


**a.** Locate the branch adapter

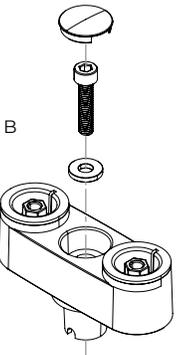


**b.** Remove the plastic cap and take out the M8x35mm screw and M8 washer located beneath it.

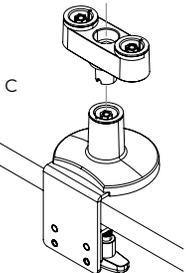


**c.** Insert branch adapter into base clamp.

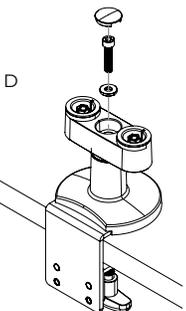

**d.** Secure the branch adapter to the base clamp using the previously removed M8x35mm screw and M8 washer. Use the provided tools to tighten the screw in place. Reattach the plastic cap in the same position it was removed from.

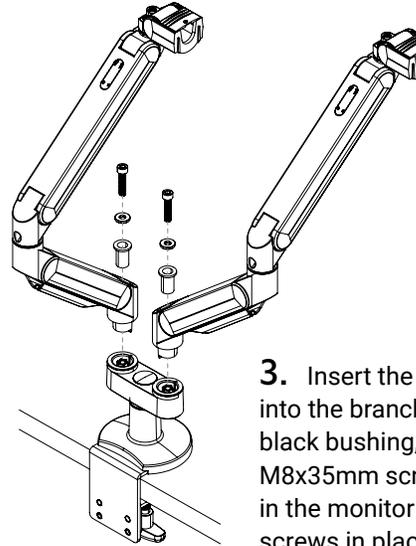

**3.** Insert the dual monitor arms into the branch adapter. Slip the black bushing, M8 washers and M8x35mm screws into the openings in the monitor arms. Tighten the M8 screws in place using the provided tools.

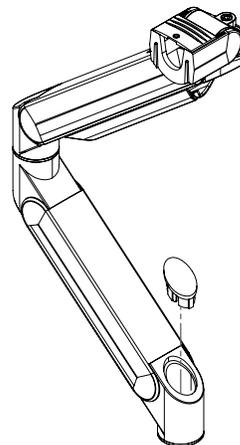

**4.** Insert the rubber caps into the openings in both monitor arms.

**5.** Refer to steps 4–5 on page one of this guide for remaining assembly.