

## Precipice Corner Installation Pictorial



How to install Precipice on a single outside corner or multiple outside corners



|   |  |
|---|--|
|   |  |
| <p>Precipice corners come in a set of four pieces as shown. They are identified as 1A, 1B, 2A, 2B for the purpose of these instructions.</p>          | <p>This image shows how the four pieces fit together with the two longer corners paired along the first row and the two shorter corners paired along the second row.</p> |
|   |  |
| <p>Step 1: Begin installation at base of corner placing piece 1A as shown. The circled edge of the piece should be flush with the adjoining wall.</p> | <p>Step 2: Place piece 1B along the base of the adjoining wall so that it interlocks with piece 1A as shown.</p>   |
|   |  |
| <p>Step 3: Place piece 2A as shown. The circled edge of the piece should be flush with the adjoining wall.</p>  | <p>Step 4: Place piece 2B on adjoining wall so that it interlocks with piece 2A as shown.</p>  |

## Precipice Corner Installation Pictorial

ISLAND STONE



STOP: If your project only has one outside corner proceed with Single Corner Installation below. If there are two outside corners on the same wall, skip down to Multiple Corner Installation.

### Single Corner Installation

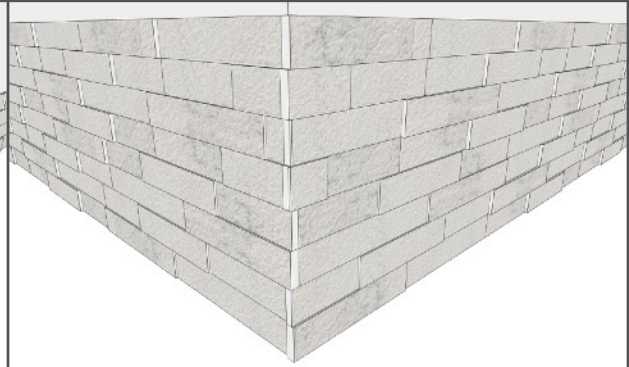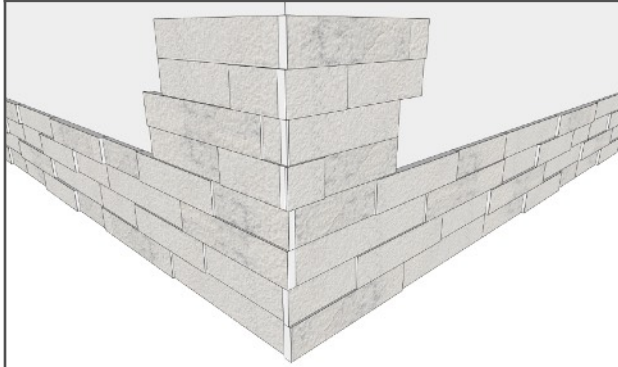

Step 5: With your four corners assembled you can now use Precipice Panels along your bottom row to complete both sides of the wall moving outwards from the corner as shown.

Step 6: Follow the same approach on your second row, use Precipice Panels to complete both sides of the wall moving outwards from the corner as shown.

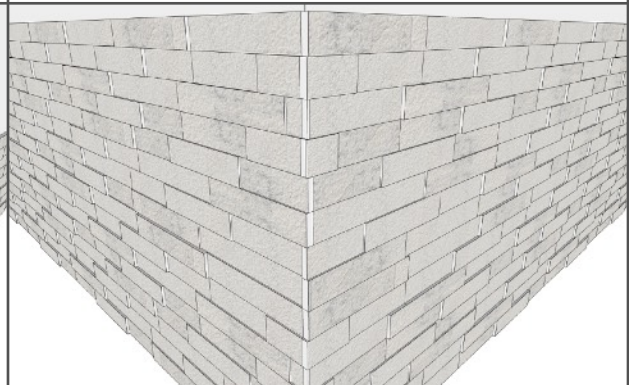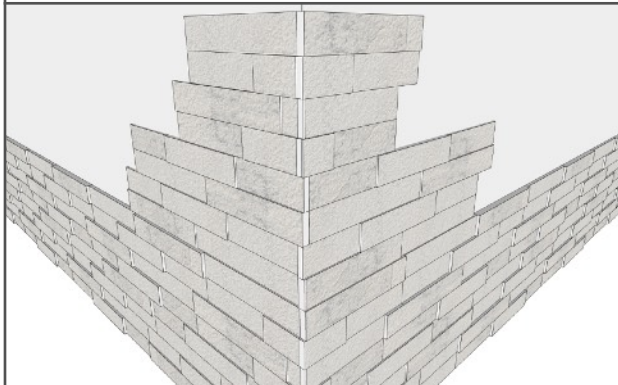



Step 7: Repeat steps 1-6 for subsequent rows.

Step 8: Continue building upwards until project is complete.

# Precipice Corner Installation Pictorial





**Multiple Corner Installation:**  
This pictorial is intended as a guide. Based on site conditions, you may need to modify your installation approach to achieve a desired appearance. Installation constitutes acceptance.

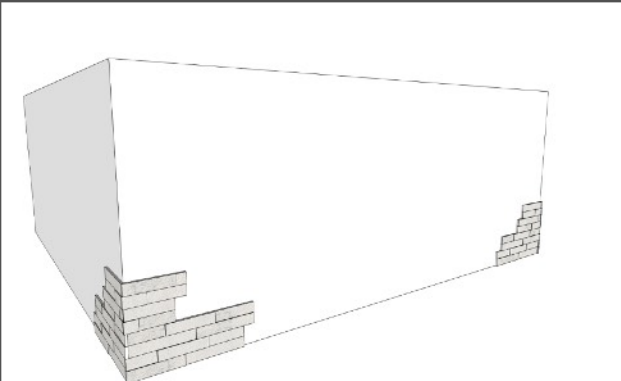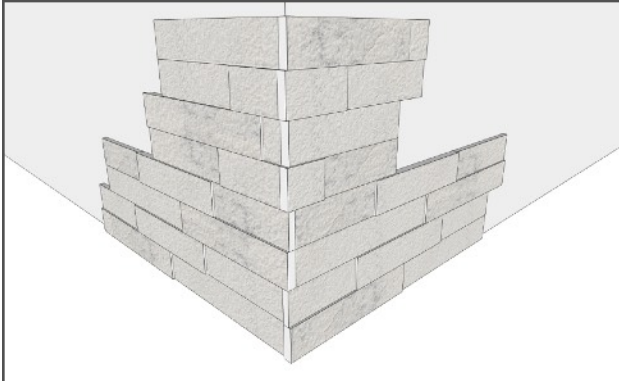



Complete Step 1-4 from the first page for both corners of the wall.

The wall should now appear like the diagram above. The distance between the corners will vary and are project specific.

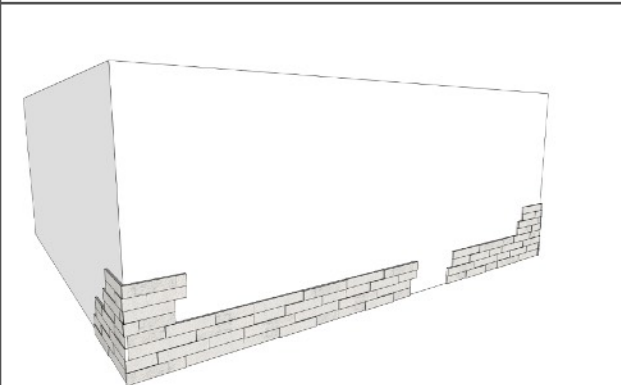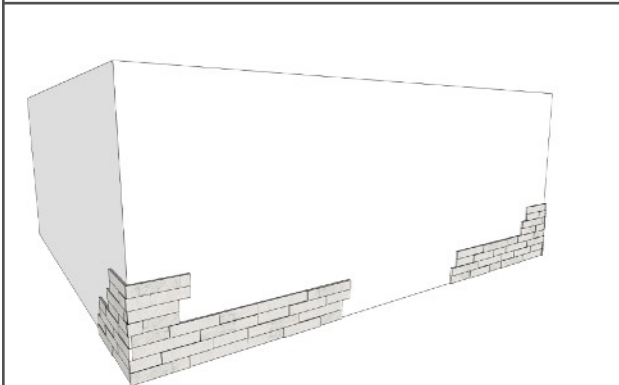

Step 5: Moving inwards from each corner, install Precipice Panels on the face of the wall as shown.

Step 6: Repeat Step 5 until the remaining open space is less than a full Precipice Panel.



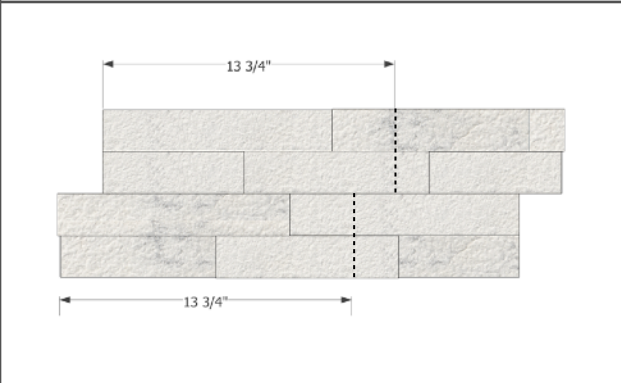
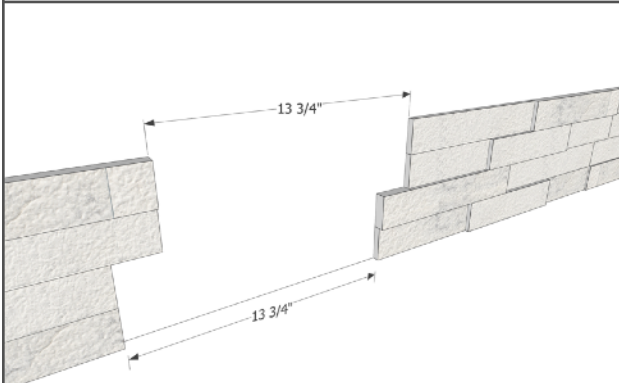


Step 7: Measure the distance between the two full panels as shown. This distance will vary by project.

Step 8: On a full Precipice Panel measure and mark length.

Precipice Corner Installation Pictorial

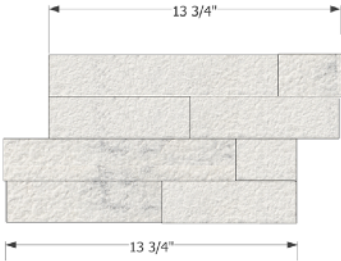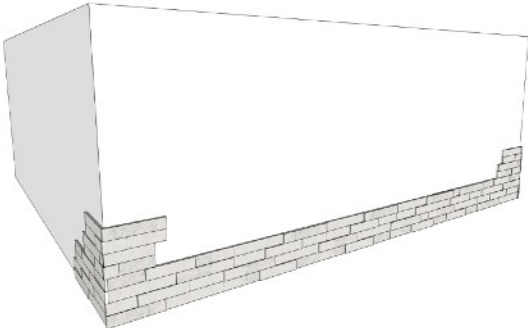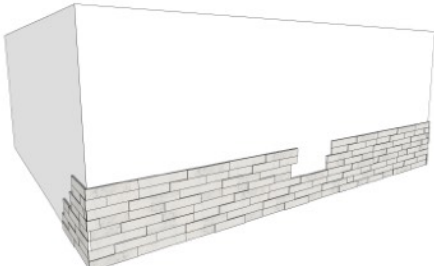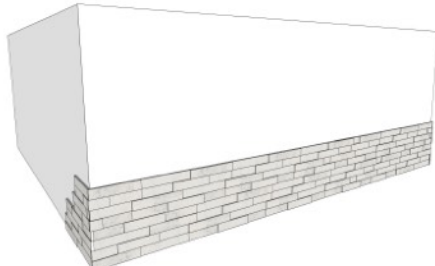

|  |   |
|--|---|
|   |   |
| <p>Step 9: Cut the panel with a wet saw equipped with a diamond blade designed for cutting natural stone.</p>  | <p>Step 8: Install the filler piece in the opening.</p>                             |
|    |  |
| <p>Repeat Steps 5-8 as you work your way up the wall. Depending on the length of the wall, it may be beneficial to change the location of the filler piece on subsequent rows.</p> |   |

