

Operations and Maintenance Manual



husseyseatingTM
YOUR PARTNER FOR SEATING SOLUTIONS

		<p>Prior to operating your new MAXAM1 seating unit, please read and understand the operating and maintenance instructions in this Owner's Manual.</p>
--	---	--

TABLE OF CONTENTS

- 1.0** Congratulations on Your MAXAM Purchase
- 2.0** MAXAM1 Operating Instructions
- 3.0** MAXAM1 Recommended Preventive Maintenance & Inspection
- 4.0** MAXAM1 Recommended Safety Instructions
- 5.0** MAXAM1 Recommended Care and Cleaning Instructions



Safety Warning Notes will be identified with this symbol.



Prior to operating your new MAXAM1 seating unit, please read and understand the operating and maintenance instructions in this Owner's Manual.



1.0 Congratulations on Your MAXAM1 Purchase

Hussey Seating Company congratulates you on your new MAXAM1 Portable Gymnasium Seating purchase.

MAXAM1, the latest innovation in portable gymnasium seating from the world's leading expert, provides superior flexibility, superior safety, and superior value.

Please take the appropriate time to read and understand this manual to make the most of your MAXAM1 purchase. You will not only understand the features and benefits that your new product has to offer, but you will also gain an understanding of the product's preventive maintenance requirements which will help extend the product's life.

Congratulations and Thank You,
Hussey Seating Company



		<p>Prior to operating your new MAXAM1 seating unit, please read and understand the operating and maintenance instructions in this Owner's Manual.</p>
--	---	--

2.0 MAXAM1 Operating Instructions

The following instructions will outline the basic safe operating instructions for transport and use of MAXAM1 Portable Bleacher Seating.



Step 1: MAXAM1 Portable Bleachers are designed for quick & easy one-person transport and operation. To deploy the seating from the stored position, extend each of the traction arms.



Step 2: Depress the spring button on the far side of the stabilizer (top of stabilizer when MAXAM1 is in the use position) and allow it to drop down to the ground.



Step 3: Grip the handles provided and tip the unit down onto the traction arms.



Handles on the unit are designed for use when deploying the seating from the stored position, as shown in photo. Avoid gripping the formed aluminum structure.



Step 4: Give it a gentle push down until seating is in position.





Prior to operating your new MAXAM1 seating unit, please read and understand the operating and maintenance instructions in this Owner's Manual.

2.0 MAXAM1 Operating Instructions (Cont.)



Step 5: Once the MAXAM1 unit is tipped down and positioned for use, pull the stabilizers completely out until the spring buttons lock them. Make sure the adjacent casters are outward (as shown at left).



Step 6: Confirm that the casters are NOT turned upwards (as shown at left).



Step 7: To move the MAXAM1 unit from the use position, unlock each extended stabilizer by pushing the spring button on the top and sliding each stabilizer forward until the button locks into position and then follow the above steps in reverse order.



Stabilizers prevent the unit from tipping over backward. It is important to pull these out to the locked position when the unit is tipped down for use, and to lock them in the retracted position when rolling the unit around so that they do not drag on your floor.

		<p>Prior to operating your new MAXAM1 seating unit, please read and understand the operating and maintenance instructions in this Owner's Manual.</p>
--	---	--

2.0 MAXAM1 Operating Instructions (Cont.)

MAXAM 1 units may be abutted end-to-end only on flat and level surfaces (Figure 1), such that tripping hazards will not be introduced at the edges of decks which are not in the same plane. The maximum distance between abutting units shall not exceed 1".

A maximum of 4 MAXAM1 Portable Seating units may be abutted adjacent to each other, for a total run of 4 units or 20 seats.

The distance between the ends of units not abutted end-to-end shall not be less than 4'-0" (Figure 2). This preserves code-required aisle width where egress must be between units, and discourages potentially injurious jumping the gap between adjacent units.

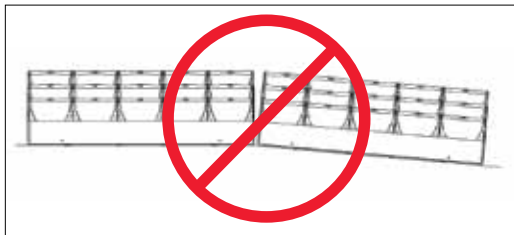


Figure 1

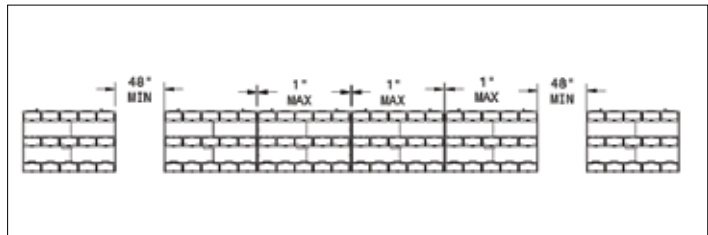


Figure 2

It is recommended to store the unit along a wall with the Courtside seats exposed as shown in Figure 3, and not with the understructure exposed as shown in Figure 4. The units should be stored in a controlled location so as to discourage unauthorized access to them.



Figure 3



Figure 4



Store the units in a controlled location to discourage unauthorized access to them.

		<p>Prior to operating your new MAXAM1 seating unit, please read and understand the operating and maintenance instructions in this Owner's Manual.</p>
--	---	--

4.0 Recommended Preventive Maintenance & Inspection

MAXAM1 Portable Bleacher Seating is designed to be relatively maintenance free. However, it is recommended that at 6 month intervals, a 6-point visual inspection of each unit take place as noted below.

6-Point Visual Inspection of Components:

Part Description	Inspect for the Following:
Rolling Casters	Check for integrity and ease of rolling.
Traction arms and Casters, Stabilizers	Traction arms not excessively loose and function as intended to aid in deployment of seating. Stabilizers functional. Check for loose hardware. Inspect casters for integrity and for missing or loose hardware.
General Hardware Check	Loose or Missing.
Decking	No cracks or splits which could lead to failure.
Seats	Tight connections, not loose.
Gas Struts	Adequate stiffness to aid in seating deployment as intended.



Casters



Stabilizers



Hardware



Decking



Seats



Gas Struts

		<p>Prior to operating your new MAXAM1 seating unit, please read and understand the operating and maintenance instructions in this Owner's Manual.</p>
--	---	--

4.0 MAXAM1 Recommended Safety Instructions

MAXAM1 Portable Bleachers quickly bring the safety, comfort and durability of large bleacher systems to nearly any spot on your facility's campus. Important safety rules are included below.



Prior to operating your new MAXAM1 Portable Bleacher Seating, please read and understand the operating and maintenance instructions in this Owner's Manual.



Do not allow persons to stand, sit, or ride on the MAXAM1 Portable Bleacher during transport.



Always deploy the rear outrigger supports on the MAXAM1 Portable Bleacher before use. These supports are designed to prevent any rear tipping of the unit.



Handles on the unit are designed for use when deploying the seating from the stored position. Avoid gripping the formed aluminum structure.



Store the units in a controlled location to discourage unauthorized access to them.



It is suggested a maximum of 4 MAXAM1 Portable Seating units be abutted adjacent to each other, for a total run of 20 seats. Place a 4'-0" minimum gap before establishing the next run of Portable Seating units. This will allow adequate egress space.

		<p>Prior to operating your new MAXAM1 seating unit, please read and understand the operating and maintenance instructions in this Owner's Manual.</p>
--	---	--

5.0 MAXAM1 Recommended Care and Cleaning Instructions

This section of the manual provides care and cleaning instructions to properly maintain the operation and aesthetic appearance of the MAXAM1 Portable Bleacher. The MAXAM1 Portable Bleacher is mainly comprised of urethane coated plywood (decking), HDPE plastic (seats), and aluminum (support structure). Hardware is zinc plated and stainless steel. Use cleaners compatible with these materials.

Prior to transporting MAXAM1 Portable Bleachers, all loose debris should be removed from the facility floor to ensure safe maneuvering.


Keep bleacher walking surfaces swept clean, and use a mop with a mild detergent to clean up any water or drink spills. Do not allow water or drink spills to remain on the product for an extended period of time as this will result in surface deterioration.

Keep seats clean using a mild detergent.

Do not use harsh chemicals or products containing bleach on either the seats, decking, or support structure. Do not use chemicals or detergent that are not compatible with wood, plastic, or aluminum.

Failure to keep the MAXAM1 Portable Bleacher clean may shorten the product life.


This is a weather resistant bleacher only – it is not warranted to be weather proof. Hussey Seating does not recommend keeping or storing bleachers outdoors where they are exposed to rain or other extreme weather. Hussey Seating's warranty does not cover defects caused by exposure to rain or other extreme weather conditions.

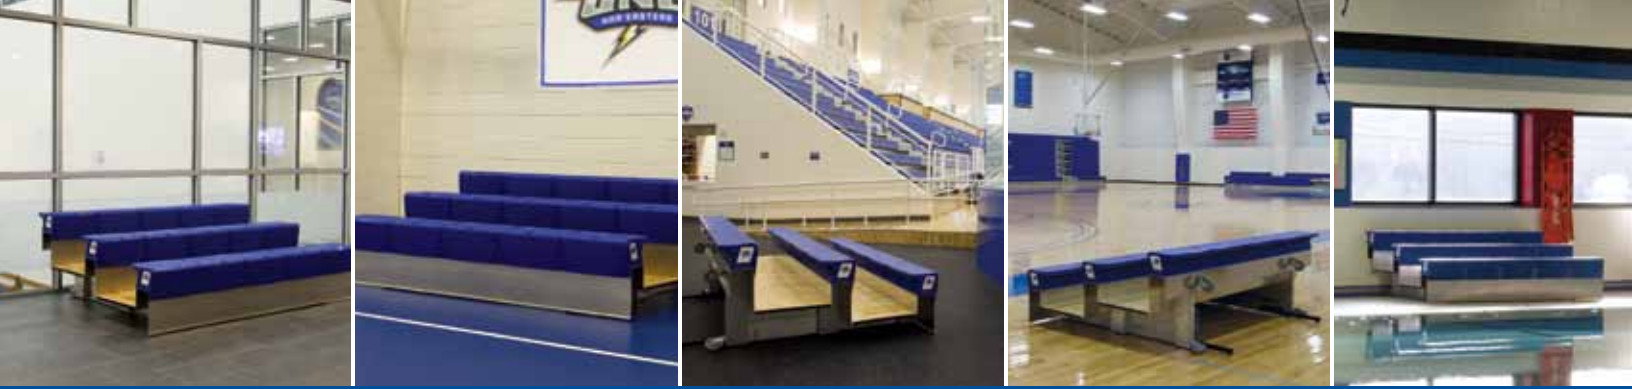

Hussey Seating Company™

The Hussey Seating Company story dates back to 1835 with William Hussey's tremendously successful plow design, and thus, the Hussey Plow Company was born. As times changed over the next sixty years, the family set about reinventing the business, evolving into the company that is now seating the world. Today, under the sixth generation of family leadership, Hussey Seating Company is proud to be known as the leading manufacturer of seating solutions throughout the world – in stadiums, arenas, schools, universities, colleges, places of worship and anywhere people gather.

Hussey. Your partner for seating solutions.

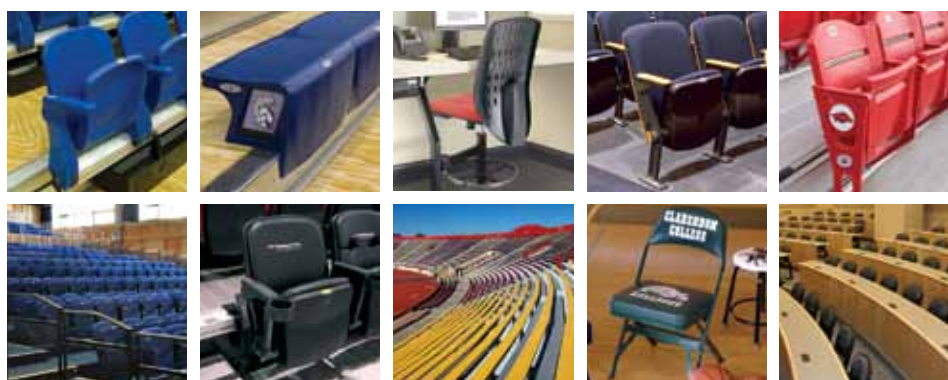

husseyseating™

YOUR PARTNER FOR SEATING SOLUTIONS

38 Dyer Street Extension
North Berwick, Maine 03906 USA
Toll Free (USA) 1.800.341.0401
Tel: +1.207.676.2271 • Fax: +1.207.676.2222
info@husseyseating.com • www.husseyseating.com